

Inseego Wavemaker™ 5G indoor router FX3100



INSEEGO COPYRIGHT STATEMENT

© 2024 Inseego Corp. All rights reserved. Complying with all copyright laws is the responsibility of the user. Without limiting the rights under copyright, no part of this document may be reproduced, stored in or introduced into a retrieval system, or transmitted in any form or by any means (electronic, mechanical, photocopying, recording or otherwise), or for any purpose without the expressed written permission of Inseego Corp.

SOFTWARE LICENSE

Proprietary Rights Provisions:

Any software drivers provided with this product are copyrighted by Inseego Corp. and/or Inseego Corp.'s suppliers. Although copyrighted, the software drivers are unpublished and embody valuable trade secrets proprietary to Inseego Corp. and/or Inseego Corp. suppliers. The disassembly, decompilation, and/or Reverse Engineering of the software drivers for any purpose is strictly prohibited by international law. The copying of the software drivers, except for a reasonable number of back-up copies is strictly prohibited by international law. It is forbidden by international law to provide access to the software drivers to any person for any purpose other than processing the internal data for the intended use of the software drivers.

U.S. Government Restricted Rights Clause:

The software drivers are classified as "Commercial Computing device Software" and the U.S. Government is acquiring only "Restricted Rights" in the software drivers and their Documentation.

U.S. Government Export Administration Act Compliance Clause:

It is forbidden by US law to export, license or otherwise transfer the software drivers or Derivative Works to any country where such transfer is prohibited by the United States Export Administration Act, or any successor legislation, or in violation of the laws of any other country.

TRADEMARKS AND SERVICE MARKS

Inseego Corp. is a trademark of Inseego Corp., and the other trademarks, logos, and service marks (collectively the "Trademarks") used in this user manual are the property of Inseego Corp. or their respective owners. Nothing contained in this user manual should be construed as granting by implication, estoppel, or otherwise, a license or right of use of Inseego Corp. or any other Trademark displayed in this user manual without the written permission of Inseego Corp. or its respective owners.

- MiFi® and the MiFi logo are registered trademarks of Inseego Corp.
- Microsoft and Windows are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.
- Linux® is the registered trademark of Linus Torvalds in the U.S. and other countries.

The names of actual companies and products mentioned in this user manual may be the trademarks of their respective owners.

Document Number: 14965413-003 Rev 2

Contents

Introduction and getting started	5
Overview	6
System requirements	6
Ports and buttons	7
Indicator LEDs	8
Getting started	9
Installing a SIM card	9
Powering on	10
Identifying a location	10
Connecting to the FX3100	10
Monitoring and managing your FX3100	12
Caring for your FX3100	13
Replacing a SIM card	13
Resetting your FX3100	14
Care tips	15
Configuration	16
Overview	17
Home page	18
Side menu	18
Getting help	18
Admin password	19
Changing the Admin password	19
Managing data usage	20
Data Usage page	21
Managing Wi-Fi settings	23
Settings tab	24
Primary Network tab	26
Guest Network tab	28
Managing connected devices	30
Connected Devices page	31
Managing settings	33
Preferences tab	34
Software Update tab	35
Backup and Restore tab	37
VPN tab	39
APN Tab	41
Advanced tab	43
Viewing info about the FX3100	44
Internet Status tab	45
Internet Sessions tab	46
Diagnostics tab	47
Device Info tab	49
Logs Tab	50
Getting support	51
Help tab	52
Customer Support tab	53
Advanced settings	54
Overview	55
Using advanced settings	55
Cellular tab	56

Manual DNS tab	57
SIM tab.....	58
Firewall tab	60
MAC Filter tab	61
LAN tab.....	62
Port Filtering tab	65
Port Forwarding tab	67
Troubleshooting and support.....	70
Overview.....	71
Troubleshooting	71
I cannot access the Admin web UI	71
My connecting device is not obtaining a valid IP address.....	71
I see other networks, but not the network name for my FX3100	72
I see the network name, but cannot connect a device to my FX3100	72
I cannot get streaming platforms to work with my FX3100	73
My FX3100 is getting slow speeds/low throughput.....	73
Do I need an external antenna?	73
Do I need a signal amplifier or booster?.....	73
Does the USB port support RNDIS?.....	73
Does the USB port support USB-C to Ethernet adapters?.....	74
Technical Support	74
Product specifications and regulatory information.....	75
Product specifications	76
Device	76
Environmental	76
Network connectivity.....	76
Wi-Fi.....	77
Security.....	77
Regulatory information	78
Product certifications and supplier's declarations of conformity	80
Energy efficiency.....	80
Wireless communications	80
Limited warranty and liability	81
Safety hazards.....	82
Glossary	83
Glossary	84

1

Introduction and getting started

[Overview](#)

[Ports and buttons](#)

[Indicator LEDs](#)

[Getting started](#)

[Caring for your FX3100](#)

Overview

The FX3100 provides gigabit-class wireless broadband internet capabilities. With dual-band Wi-Fi 6, the FX3100 supports up to 64 connected devices, two Ethernet LAN/WAN ports, and a USB-C port for tethering. Connect laptops, tablets, e-readers, gaming consoles and more.




Inside the box you will find a FX3100, a Get started card, and an Europlug power supply.

System requirements

- Compatible with all major operating systems.
- Works with the latest versions of browsers.

To use Wi-Fi mode, connecting devices need Wi-Fi capability. You can also connect via Ethernet or USB.


Ports and buttons

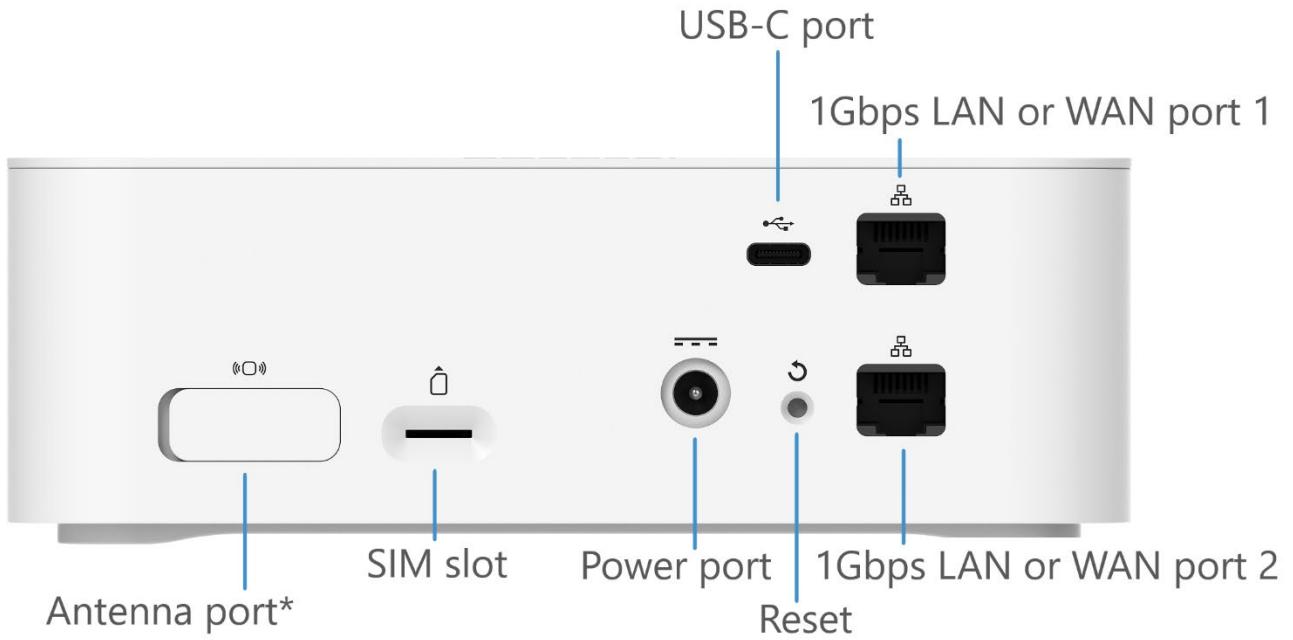

* The antenna port is for an optional external 3.4-5GHz antenna and will only provide support for mobile frequency bands within this range. To activate the external antenna port, you must enable it from **Settings > Preferences** in the Admin web UI.

Indicator LEDs

The front of the FX3100 has an indicator LED. It changes colors and either blinks or glows solid to communicate current states for the device.

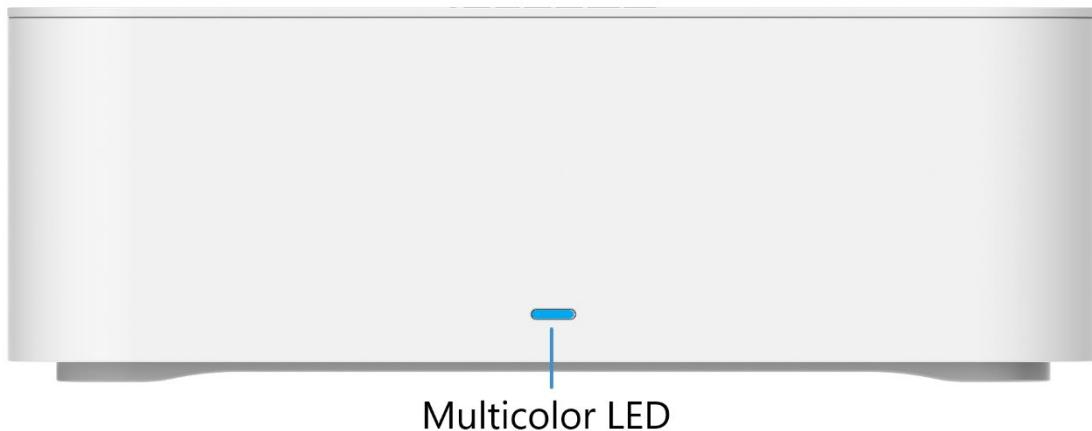

LED color	Operation	Meaning
Blue	Solid Blinking	Strong 5G connection (3 – 5 bars) Weak 5G connection (1 – 2 bars)
Green	Solid Blinking	Strong 4G connection (3 – 5 bars) Weak 4G connection (1 – 2 bars)
White	Blinking	Factory reset
Yellow	Solid	Software update is in progress
Red	Solid Blinking	Router is booting up No service, SIM error, or locked SIM card

The LAN/WAN ports also have indicator LEDs.

LED color	Operation	Meaning
Green	Solid Blinking Off	Indicates Ethernet connection speed 1000 Mbps (Gigabit) Data is being transferred 10/100 Mbps
Amber	Solid Off	Indicates port status Port is being connected, but no data is being transferred Port is being disconnected

Getting started

This section provides instructions for getting your FX3100 up and running, as well as reset and support information.

Installing a SIM card


A SIM card is a small rectangular plastic card that stores your phone number and important information about your wireless service. The FX3100 supports only Nano SIM cards.



CAUTION! Always use a factory-made SIM card supplied by the service provider. Do not bend or scratch your SIM card. Avoid exposing your SIM card to static electricity, water, or dirt.

To install a SIM card:

1. If necessary, remove the SIM card from the protective sleeve, being careful not to touch the gold-colored contacts.
2. Insert the SIM card into the SIM slot, ***notch first, with the gold-colored contact points facing down.***

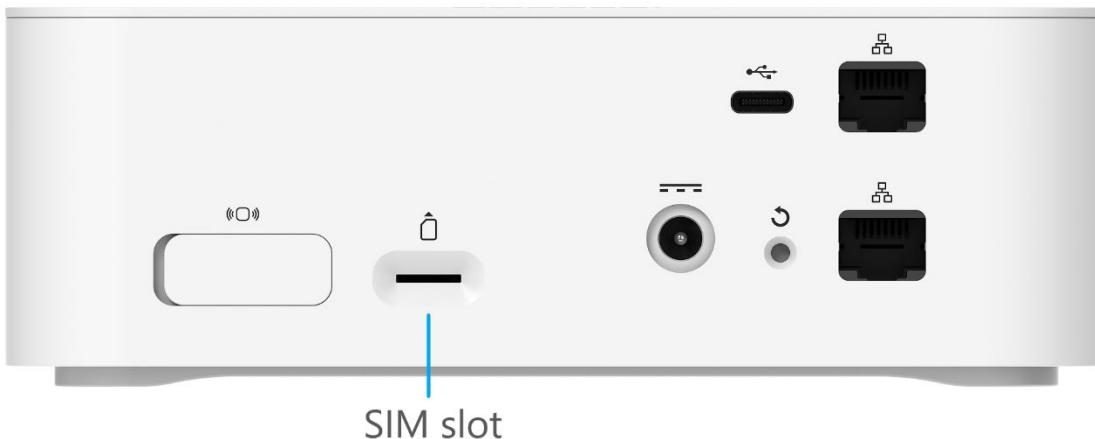

NOTE: Should your SIM card be lost or damaged, contact your network operator.

Powering on

Turn on your FX3100 with the Europlug power supply:

1. Plug the power cord into the power port on the back of the FX3100.
2. Plug the power adapter into an AC wall outlet.

WARNING! Use only the Europlug power supply that came with the FX3100. Unapproved power supplies could cause the FX3100 to overheat or catch fire, resulting in serious bodily injury, death, or property damage.

Identifying a location

Use the Inseego Mobile™ app to identify the optimal location for your FX3100.

1. Scan the QR code to install the Inseego Mobile app from AppStore or Google Play, or visit <https://inseego.com/inseego-connect-get-app> to download the App.



2. Follow instructions within the Inseego Mobile app to connect to your FX3100 and perform a location survey to identify the ideal location for your FX3100.

Connecting to the FX3100

With the FX3100, Wi-Fi devices and wired devices can connect to the mobile broadband network simultaneously.

Connecting devices wirelessly


You can connect to your FX3100 with your computer, tablet or other wireless devices that have Wi-Fi and internet browser software.

To connect a Wi-Fi capable device to your FX3100:

1. Make sure the FX3100 is powered on, and the indicator LED is blue or green.
2. On the device you want to connect to the internet, open the Wi-Fi settings or application and in the displayed list of available networks, find the **Primary Wi-Fi network name** printed on the bottom of your FX3100.




3. Click **Connect** or otherwise select the network name.
4. When prompted, enter the **Primary Wi-Fi password** printed on the bottom of the FX3100.

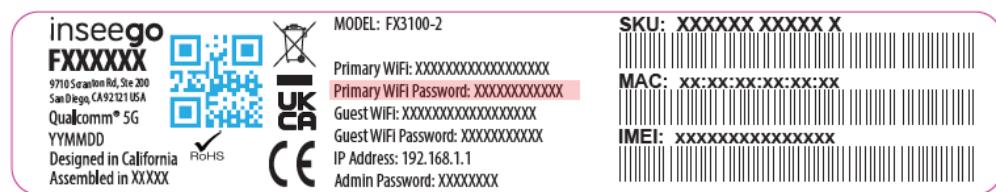

Your Wi-Fi capable device is now connected to the internet.

Connecting devices with Ethernet or USB

You can connect wired devices such as laptops, printers, and gaming consoles via Ethernet or USB.

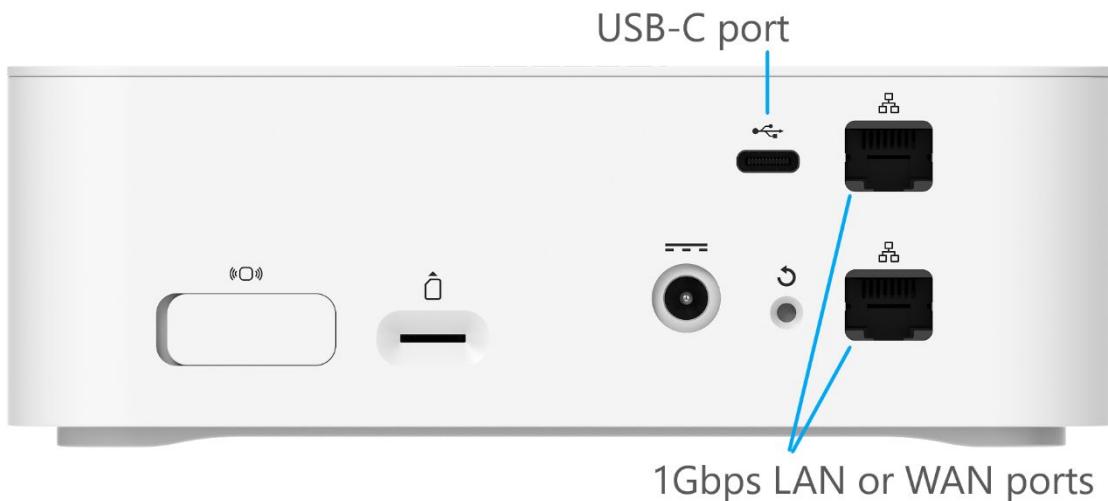

To connect Ethernet devices:

1. Plug one end of an Ethernet cable into a LAN/WAN port on the FX3100.
2. Plug the other end of the cable into the Ethernet port of the device you wish to connect.

To connect USB devices:

1. Plug the USB-C end of a USB cable into the USB port on the FX3100.
2. Plug the other end of the cable into the USB port of the device you wish to connect.

Devices plugged into the FX3100 via Ethernet and USB have instant access to the internet.

Monitoring and managing your FX3100

You can use the following options to monitor and manage your FX3100.

Inseego Mobile app


You can use the same mobile app you used to find a location for your FX3100 to perform basic device monitoring and management.

Admin web UI

Once your FX3100 is connected to a device that supports web browsing, you can use the Admin web UI to customize settings, change your password, and access information.

On a device connected to the FX3100, open any web browser, and go to <http://192.168.1.1> or <http://fx3100.com>.

Select **Sign In** (in the top-right corner of the screen) and enter the **Admin Password** printed on the bottom of the FX3100.

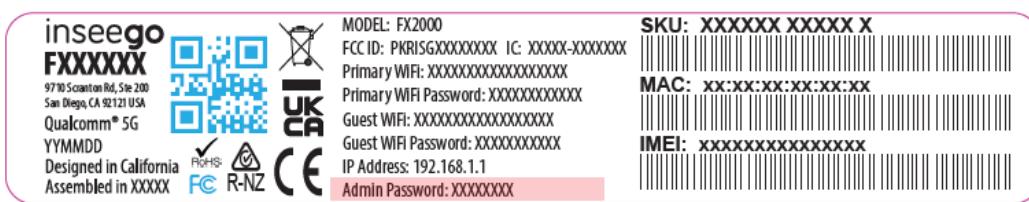

Caring for your FX3100

This section provides information on general care and restoring your FX3100 to factory default settings.

Replacing a SIM card


Your SIM card is a small rectangular plastic card that stores your phone number and important information about your wireless service. The FX3100 supports only Nano SIM cards. To replace a SIM card, select the correct SIM for this device.



CAUTION! Always use a factory-made SIM card supplied by the service provider. Do not bend or scratch your SIM card. Avoid exposing your SIM card to static electricity, water, or dirt.

To replace a SIM card:

1. Remove the existing SIM card.

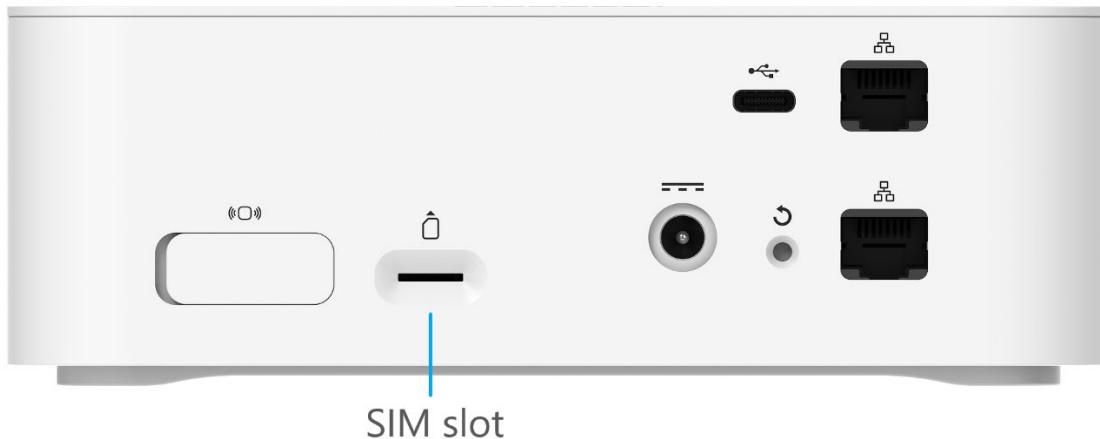

2. If necessary, remove the SIM card from the protective sleeve, being careful not to touch the gold-colored contacts.
3. Insert the SIM card into the SIM slot, ***notch first, with the gold-colored contact points facing down.***

NOTE: Should your SIM card be lost or damaged, contact your network operator.

Resetting your FX3100

You can reset your FX3100 to factory settings from the Admin web UI, Inseego Mobile app, or by using the RESET button on the FX3100

CAUTION! Resetting returns your FX3100 to factory settings, including resetting the Wi-Fi name and password and admin password to the defaults shown on the label. This disconnects all devices.

Resetting from the Admin web UI

To reset the FX3100 from the Admin web UI, select **Settings > Backup and Restore** and select **Restore factory defaults**.


Resetting from the Inseego Mobile app

To reset the FX3100 from the Inseego Mobile app, select **Mobile Options**, then select **Factory Reset**.

Resetting with the RESET button

The reset button is in a small hole located on the back of the FX3100.

1. Verify that your FX3100 is powered on.
2. Locate the reset opening  on the back of your router.

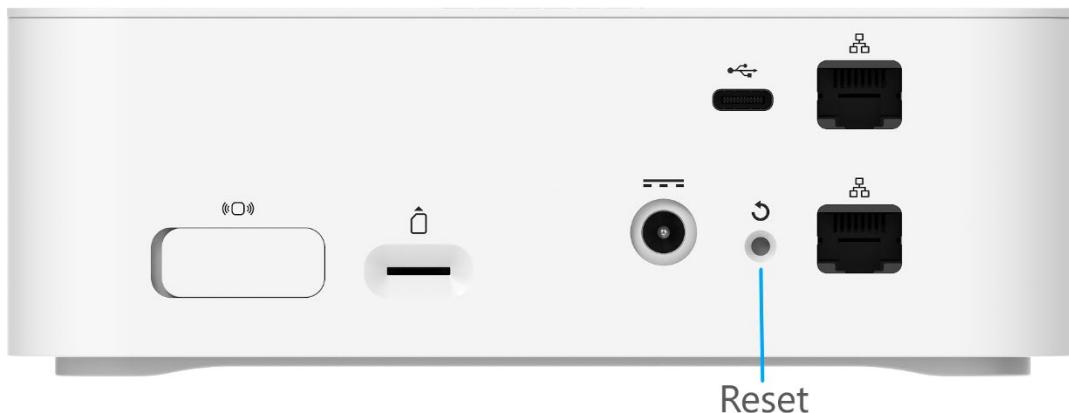

3. Press the recessed button for about five seconds until the device resets. The LED blinks white, then turns red. When it is green or blue, your FX3100 is ready.

NOTE: The first time you perform a factory reset, it may take over two minutes for your FX3100 to restart.

Care tips

Inseego recommends the following care guidelines:

- Protect the FX3100 from liquids, dust, and excessive temperatures.
- Do not apply adhesive labels to the FX3100 as they may cause the router to potentially overheat or alter the performance of the internal antenna.
- Store the FX3100 in dry and secure location when not in use.

2

Configuration

Overview

Admin password

Managing data usage

Managing Wi-Fi settings

Managing connected devices

Managing settings

Viewing info about the FX3100

Getting support

Overview

You can configure your FX3100 to best suit your needs, including changing your network name and/or passwords, setting up a guest network, viewing all currently connected devices, and setting device preferences.

You can use the following tools for configuring your FX3100:


- **Inseego Mobile app** – Allows you to perform basic device monitoring and management. This is the same app you used to identify a location for your FX3100.
- **Admin web UI** – Provides a local gateway to configure and manage your FX3100. On a device connected to your FX3100, open any web browser, and go to <http://192.168.1.1> or <http://fx3100.com>. Select **Sign In** (in the top-right corner of the screen) and enter the **Admin Password** printed on the bottom of the FX3100.

This chapter provides the configuration options available for your FX3100 devices. The configurations shown are from the Admin web UI, unless otherwise noted. Many of these options are also available with Inseego Mobile app.

Home page

The home page of the Admin web UI is the local gateway to configuring and managing your FX3100. It displays the current Wi-Fi networks and passwords and lists all currently connected devices. It also shows data usage, internet status, setting information, and provides access to support.

Click  in the bottom-right corner of a panel to access screens with further information and options.

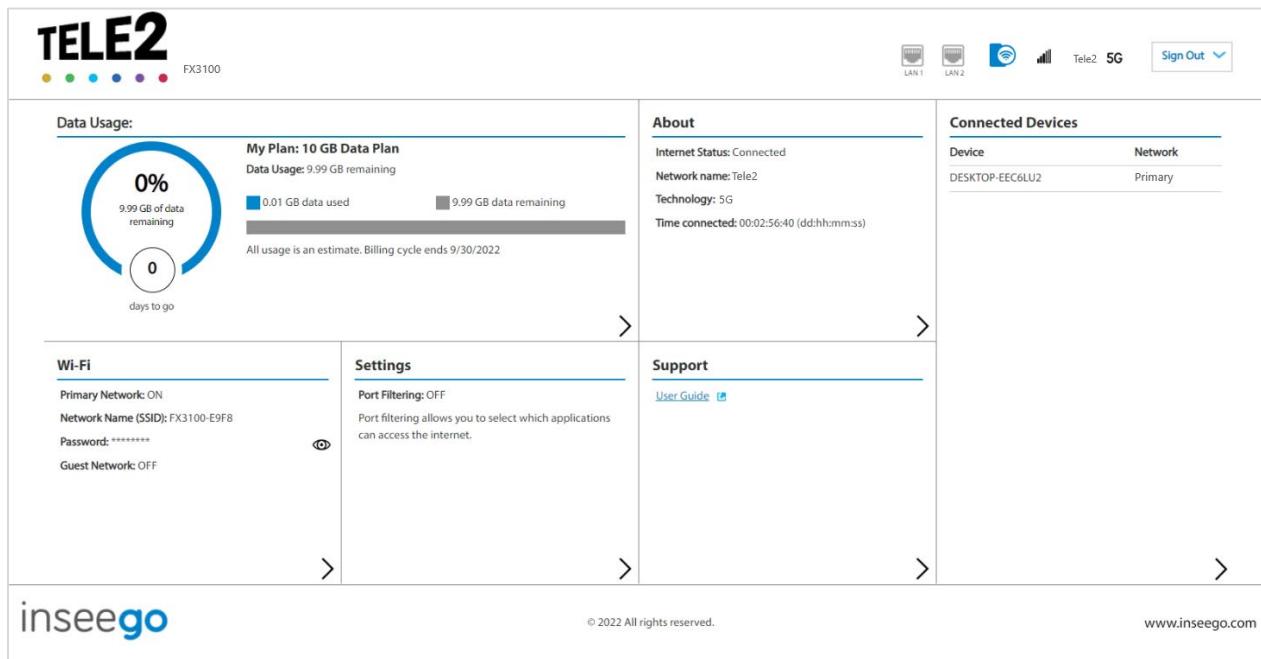

The screenshot shows the TELE2 FX3100 Admin web UI. At the top, there's a navigation bar with icons for LAN 1, LAN 2, and 5G connectivity, along with a 'Sign Out' button. Below the header, there's a 'Data Usage' summary. It includes a circular progress bar showing 0% usage, text stating 'My Plan: 10 GB Data Plan' and 'Data Usage: 9.99 GB remaining', and a bar chart showing 0.01 GB data used and 9.99 GB data remaining. A note says 'All usage is an estimate. Billing cycle ends 9/30/2022'. To the right of the data usage are sections for 'About' (Internet Status: Connected, Network name: Tele2, Technology: 5G, Time connected: 00:02:56:40) and 'Connected Devices' (DESKTOP-EEC6LU2, Primary). Below these are sections for 'Wi-Fi' (Primary Network: ON, Network Name (SSID): FX3100-E9F8, Password: *****, Guest Network: OFF) and 'Settings' (Port Filtering: OFF). There's also a 'Support' section with a 'User Guide' link. At the bottom left is the 'inseego' logo, and at the bottom right are copyright information ('© 2022 All rights reserved.') and the website address ('www.inseego.com').

Side menu

Each sub screen in the FX3100 Admin web User Interface includes a menu on the left, which you can use to return to the home page or jump to other pages. The current page is indicated by a blue bar.




The screenshot shows a vertical side menu on the 'Data Usage' page. The menu items are: Home, Data Usage (highlighted with a blue bar), Wi-Fi, Connected Devices (with a red notification badge containing the number 1), Settings, About, and Help.

Getting help

Select the question mark (?) in the upper right-hand corner of a page to view help on that topic.

Admin password

The Admin password is what you use to sign into the FX3100 Admin web UI. A default Admin password is assigned to each individual device and is printed on the bottom of the device.

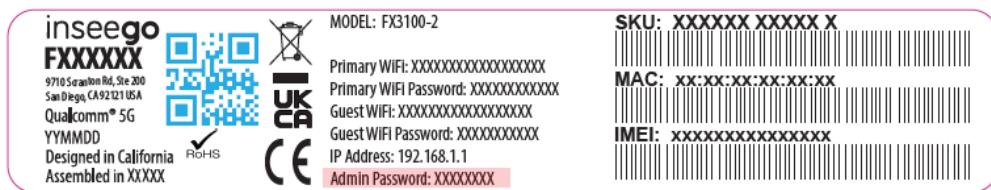

You can change the Admin password to something easier to remember and set up a security question that will help you securely recover your password if you forget it.

NOTE: You can set up separate Wi-Fi passwords for both primary and guest networks in **Wi-Fi**, but these are different from the Admin password, which is for this web User Interface.

Important: It is critical that you change the Admin password from the default to keep the device and your network secure.

Changing the Admin password

To change the Admin password:

1. **From the Admin web UI:** Click the down arrow next to **Sign Out** in the top-right corner of any Admin web UI page and select **Change Password**.
2. Enter your current Admin password, then click **Continue**.
3. Enter your current Admin password again, then enter a new password and confirm it.
4. Select a security question from the drop-down list and type an answer to the question.
NOTE: Answers are case-sensitive.
5. Click **Save Changes**.

The next time you sign in to the FX3100 web User Interface, use the new Admin password. If you cannot remember the password, click **Forgot Admin password**. After you correctly answer the security question you set up, the current password is displayed.

Managing data usage

You can monitor and manage data usage on your FX3100 using the Data Usage page.

On the Admin web UI home page, the Data Usage panel shows current data usage information.


The screenshot shows the Admin web UI home page for the TELE2 FX3100 router. The top navigation bar includes icons for LAN 1, LAN 2, a signal strength indicator, 'Tele2 5G', and a 'Sign Out' button. The main content area features a large 'Data Usage' section with a red border. Inside this section, there's a circular progress bar indicating 0% data usage, with text stating '9.99 GB of data remaining' and '0 days to go'. Below this, it says 'My Plan: 10 GB Data Plan' and 'Data Usage: 9.99 GB remaining'. A bar chart shows '0.01 GB data used' (blue) and '9.99 GB data remaining' (grey). A note at the bottom states 'All usage is an estimate. Billing cycle ends 9/30/2022'. To the right of the main content are sections for 'About', 'Connected Devices', 'Wi-Fi', 'Settings', and 'Support'. The 'About' section shows 'Internet Status: Connected', 'Network name: Tele2', 'Technology: 5G', and 'Time connected: 00:02:56:40 (dd:hh:mm:ss)'. The 'Connected Devices' section lists 'DESKTOP-EEC6LU2' as the primary device. The 'Wi-Fi' section shows 'Primary Network: ON', 'Network Name (SSID): FX3100-E9F8', 'Password: *****', and 'Guest Network: OFF'. The 'Settings' section has a 'Port Filtering: OFF' option. The 'Support' section includes a 'User Guide' link. At the bottom left is the 'inseego' logo, and at the bottom right is the copyright notice '© 2022 All rights reserved.' and the website 'www.inseego.com'.

To manage or view data usage, select **>** from the home page Data Usage panel or select **Data Usage** from the side menu. The Data Usage page appears.

Data Usage page

Use the Data Usage page to view details and manage your FX3100 data usage.

NOTE: Your FX3100 provides only a rough estimate of data usage. Always check with your service provider for exact usage.

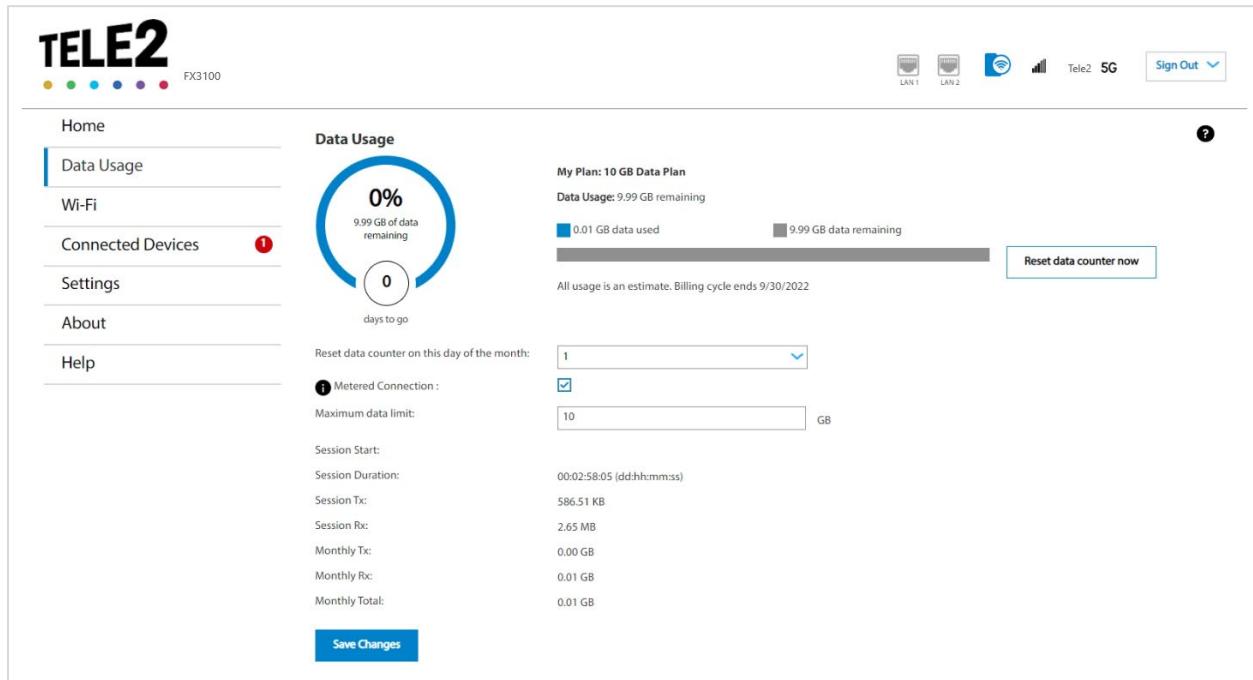

The data usage graph displays vary according to plan, but generally include:

- Estimated percentage of data remaining for the current billing cycle
- Number of days left in the billing cycle
- Data limit on your plan
- Estimated amount of data used in the current billing cycle
- Estimated amount of data remaining for the current billing cycle
- Date the billing cycle ends

Use the **Reset data counter now** button to restart the data usage shown on this page to zero.

Reset data counter on this day of the month: Use the drop-down to select a day of the month for the counter displayed on this page to reset.

Maximum data limit: Enter a maximum data limit, if desired.

Session Start: The date and time the current internet session began.

Session Duration: The amount of time that has elapsed since the connection for the current internet session was established.

Session Tx: The amount of data transmitted for the current internet session. This counter starts at zero when the connection is established.

Session Rx: The amount of data received for the current internet session. This counter starts at zero when the connection is established.

Monthly Tx: The amount of data transmitted for the current billing cycle.

Monthly Rx: The amount of data received for the current billing cycle.

Monthly Total: The total amount of data for the current billing cycle.

Select **Save Changes** to enact changes.

Managing Wi-Fi settings

Your FX3100 offers primary and guest networks for accessing the internet over Wi-Fi. Each network can be accessed over two bands: 2.4 GHz and 5 GHz.

On the Admin web UI home page, the Wi-Fi panel shows the current name and password of the primary and guest networks.

The screenshot shows the FX3100 Admin web UI home page. At the top, it displays 'TELE2' and 'FX3100'. On the right, there are icons for LAN 1, LAN 2, a signal strength meter, 'Tele2 5G', and a 'Sign Out' button. The main content area is divided into several sections:

- Data Usage:** Shows a circular progress bar at 0% with '9.99 GB of data remaining'. It also displays 'My Plan: 10 GB Data Plan', 'Data Usage: 9.99 GB remaining', '0.01 GB data used', and '9.99 GB data remaining'. A note says 'All usage is an estimate. Billing cycle ends 9/30/2022'.
- About:** Shows 'Internet Status: Connected', 'Network name: Tele2', 'Technology: 5G', and 'Time connected: 00:02:56:40 (dd:hh:mm:ss)'.
- Connected Devices:** Shows a table with one entry: 'DESKTOP-EEC6LU2' under 'Device' and 'Primary' under 'Network'.
- Wi-Fi:** This section is highlighted with a red box. It shows 'Primary Network: ON', 'Network Name (SSID): FX3100-E9F8', 'Password: *****', and 'Guest Network: OFF'. There is a 'Wi-Fi' link below these details.
- Settings:** Shows 'Port Filtering: OFF' with a note: 'Port filtering allows you to select which applications can access the internet.'
- Support:** Shows a 'User Guide' link.

At the bottom left is the 'inseego' logo. The bottom right corner includes the copyright notice '© 2022 All rights reserved.' and the website 'www.inseego.com'.

To manage settings for these networks, select from the home page Wi-Fi panel or select **Wi-Fi** from the side menu.

The Wi-Fi page includes three tabs:

- Settings
- Primary Network
- Guest Network

Settings tab

You can use the default values as they appear on this tab or can adjust them for your environment.

The screenshot shows the TELE2 FX3100 Settings tab. The left sidebar has links for Home, Data Usage, Wi-Fi, Connected Devices (with a red notification dot), Settings (selected), About, and Help. The main content area is titled "Settings" and shows "Wi-Fi Preferences". It includes a note about changes affecting all networks. A slider for "Allow Wi-Fi Devices to Connect" is turned on. Below it, a "Change Connection Limit" link is shown. Under "Band Selection", there are two sections: "2.4 GHz Band" and "5 GHz Band", each with radio buttons for Primary Network, Guest Network, and Off. Under "2.4 GHz Band Settings", there are dropdown menus for 802.11 Mode (set to 802.11bgn/ax) and Channel (set to Automatic). Under "5 GHz Band Settings", there are dropdown menus for 802.11 Mode (set to 802.11acn/ax), Bandwidth (set to 80 MHz), and Channel (set to Automatic). A "Save Changes" button is at the bottom.

Wi-Fi

Use the **Allow Wi-Fi Devices to Connect** slider to turn Wi-Fi on or off. This selection affects primary and guest networks. **NOTE:** If Wi-Fi is off, the only way to connect devices to the FX3100 is with an Ethernet cable or USB.

Select **Change connection limit** to change the maximum number of devices allowed to connect to your FX3100. Select a number and click **Save Changes**. The maximum number of connected devices is 64.

Band Selection

Each network can be accessed over two bands: 2.4 GHz and 5 GHz:

- The 2.4 GHz band is supported by all devices with Wi-Fi and should be used by devices that are a few years old or older. This band passes through walls better and propagates over longer distances, so it may have a longer range.
- The 5 GHz band is best for newer devices. It offers better throughput, reduced interference, and faster data speeds, but does not pass through walls as well as the 2.4 GHz band.

NOTE: The guest network must be assigned at least one band before it can be turned on.

2.4 GHz Band Settings

This section displays the 802.11 Mode in use when the 2.4 GHz band is active and allows you to select a Channel.

NOTE: Leave the Channel set to **Automatic** unless you need to choose a particular channel for your environment.

5 GHz Band Settings

This section displays the 802.11 Mode in use when the 5 GHz band is active and allows you to select a Bandwidth and Channel.

Bandwidth: Leave bandwidth at the default setting unless you experience interference with other Wi-Fi devices. If you experience interference, try lowering the setting to reduce the interference.

NOTE: Leave the **Channel** set to **Automatic** unless you need to choose a particular channel for your environment.

Select **Save Changes** to store new settings.

Primary Network tab

Use these settings to connect initially to the primary Wi-Fi network or change primary network information. Connected devices must use the Wi-Fi settings shown on this screen.

The screenshot shows the TELE2 FX3100 user interface. The top bar displays the TELE2 logo and the model number FX3100. On the right side, there are icons for LAN1, LAN2, signal strength, Tele2 5G, and a sign-out button. The left sidebar has a navigation menu with options: Home, Data Usage, Wi-Fi (selected), Connected Devices (with a red notification dot), Settings, About, and Help. The main content area is titled 'Primary Network' under 'Network Settings'. It includes fields for 'Primary Network Name (SSID)' (set to FX3100-E9F8), 'Security' (set to WPA3/WPA2 Transition), and 'Password'. Below these, there is a note about generating a new password. Under 'Other Settings', there are checkboxes for 'Broadcast primary network name (SSID)' (checked) and 'Wi-Fi privacy separation' (unchecked). A 'Save Changes' button is at the bottom.

WARNING! If you change these settings, existing connected devices may lose their connection.

Network Settings

Primary Network Name (SSID): Enter a primary network name (SSID) to set up or change the primary network name. The name can be up to 32 characters long.

Security: Select an option for Wi-Fi security:

- **WPA3/WPA2 Transition** is the most secure method of Wi-Fi Protected Access and should be used, if possible, for WPA2 and WPA3 compliant devices.
- **WPA3 PSK** can be used for WPA3 devices.
- **WPA 3 Open Enhanced** provides encryption and privacy on open networks that are not password-protected and can be used for WPA3 devices.
- **WPA/WPA2 Mixed Mode** can be used if some of your older devices do not support WPA2.
- **WPA2 AES PSK** can be used for WPA2 devices.
- **Open** allows others to monitor your Wi-Fi traffic and use your data plan to access the internet.
NOTE: Avoid using this option.

Password: Enter a Wi-Fi password, **or** you can use the Generate New Password button.

Important: It is critical that you change the password from the default and use a different password from your Admin password to keep the device and your network secure.

Generate New Password: This button inserts a strong random password in the Password field.

You can click the eye icon to view the password.

Other Settings

Broadcast primary network name (SSID): When checked, this allows the Wi-Fi primary network to be displayed in the list of available Wi-Fi networks on your connected devices. If unchecked, this network is not visible to connected devices.

Wi-Fi privacy separation: Check this box to keep each connected device on this network isolated from all other connected devices. This provides additional security if some connected devices are unknown or not completely trusted. **NOTE:** For normal operation, this should be unchecked.

Select **Save Changes**.

Guest Network tab

The Wi-Fi guest network allows you to segregate traffic to a separate network rather than share access to your Wi-Fi primary network. Use settings on this tab to set up or change Wi-Fi guest network information. Connected devices must use the Wi-Fi settings shown on this screen to connect to the guest FX3100 Wi-Fi network.

The screenshot shows the TELE2 FX3100 web interface. At the top, there's a navigation bar with icons for LAN 1, LAN 2, a signal strength icon, 'Tele2 5G', and a 'Sign Out' button. Below the navigation bar, the main menu has options like Home, Data Usage, Wi-Fi (which is selected), Connected Devices, Settings, About, and Help. Under the Wi-Fi menu, there are tabs for Settings, Primary Network, and Guest Network (the latter is underlined). A note below says 'Note: For added security, share your guest network instead of your primary network.' The 'Network Settings' section contains fields for Guest Network Name (SSID) set to 'FX3100-Guest-E9F9', Security set to 'WPA3/WPA2 Transition', and a Password field. There's also a 'Generate New Password' button. The 'Other Settings' section includes checkboxes for 'Broadcast guest network name (SSID)' and 'Wi-Fi privacy separation', both of which are checked. At the bottom right of the form is a 'Save Changes' button.

NOTE: To turn the Wi-Fi guest network on, you must select at least one band for Guest Network under **Band Selection** on the **Wi-Fi Settings** tab and then select **Save Changes**.

Network Settings

Guest Network Name (SSID): Enter a guest network name (SSID) to set up or change the guest network name. The name can be up to 32 characters long.

Security: Select an option for Wi-Fi security:

- **WPA3/WPA2 Transition** is the most secure method of Wi-Fi Protected Access and should be used, if possible, for WPA2 and WPA3 compliant devices.
- **WPA3 PSK** can be used for WPA3 devices.
- **WPA 3 Open Enhanced** provides encryption and privacy on open networks that are not password-protected and can be used for WPA3 devices.
- **WPA/WPA2 Mixed Mode** can be used if some of your older devices do not support WPA2.
- **WPA2 AES PSK** can be used for WPA2 devices.
- **Open** allows others to monitor your Wi-Fi traffic and use your data plan to access the internet.
NOTE: Avoid using this option.

Password: Enter a Wi-Fi password, **or** you can use the Generate New Password button.

Important: It is critical that you change the password from the default and use a different password from your Admin or primary network password to keep the device and your network secure.

Generate New Password: This button inserts a strong random password in the Password field.

You can click the eye icon to view the password.

Other Settings

Broadcast guest network name (SSID): When checked, this allows the Wi-Fi guest network to be displayed in the list of available Wi-Fi networks on your connected devices. If unchecked, this network is not visible to connected devices.

Wi-Fi privacy separation: When checked, each connected device on this network is isolated from all other connected devices. This provides additional security if some connected devices are unknown or not completely trusted.

Select **Save Changes**.

Managing connected devices


On the Admin web UI home page, the Connected Devices panel lists the networks currently connected to your FX3100 along with the number of connected devices for each network.

The screenshot shows the Admin web UI home page for an FX3100 device. At the top, there's a header with the TELE2 logo and a color bar. On the right, there are icons for LAN 1, LAN 2, a signal strength meter, and 'Tele2 5G'. A 'Sign Out' button is also present. Below the header, there are several sections: 'Data Usage' (a circular progress bar at 0%, 9.99 GB remaining), 'About' (Internet Status: Connected, Network name: Tele2, Technology: 5G, Time connected: 00:02:56:40), 'Connected Devices' (a table with one row: Device: DESKTOP-EEC6LU2, Network: Primary), 'Wi-Fi' (Primary Network: ON, Network Name (SSID): FX3100-E9F8, Password: *****, Guest Network: OFF), 'Settings' (Port Filtering: OFF, Port filtering allows you to select which applications can access the internet), and 'Support' (User Guide). A red box highlights the 'Connected Devices' section. At the bottom, there's an 'inseego' logo and a copyright notice: © 2022 All rights reserved. The website address www.inseego.com is also shown.

To manage connected devices, select **>** from the home page Connected Devices panel or select **Connected Devices** from the side menu.

Connected Devices page

This page provides details about each device connected to the FX3100 and allows you to edit how device names appear in the UI. You can also block or unblock a device from internet access.

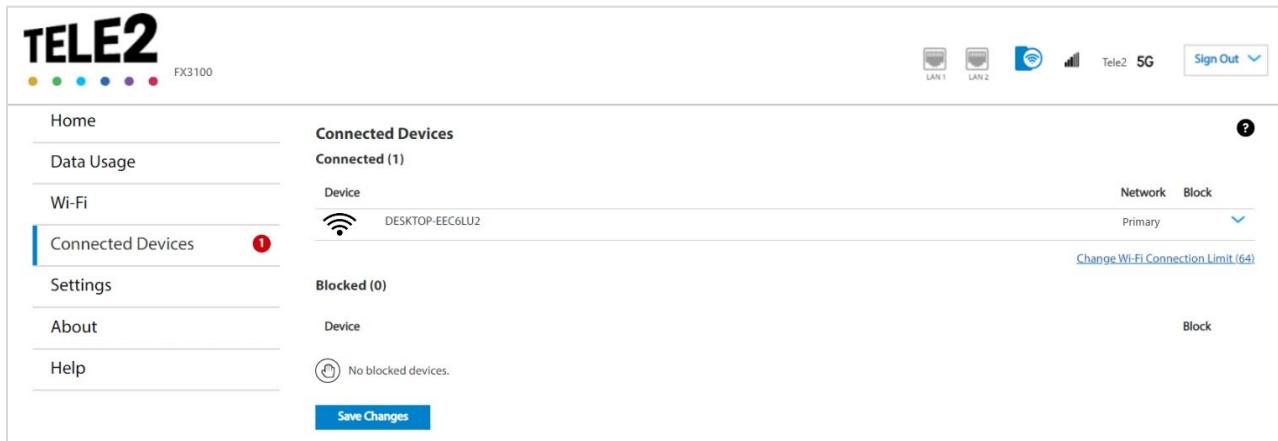

The screenshot shows the 'Connected Devices' page of the FX3100 router's web interface. The top bar displays the TELE2 logo and network status (5G). The left sidebar has links for Home, Data Usage, Wi-Fi, Connected Devices (which is selected and highlighted in blue), Settings, About, and Help. The main content area is titled 'Connected Devices' and shows 'Connected (1)'. Below this, there is a table with one row for 'DESKTOP-EEC6LU2'. The table columns are 'Device' (with a Wi-Fi icon), 'Network' (set to 'Primary'), and 'Block' (with a dropdown menu showing 'Primary'). A link 'Change Wi-Fi Connection Limit (64)' is also present. At the bottom of the page is a 'Save Changes' button.

Connected Devices

Connected: The number of devices currently connected to your FX3100.

The table lists all devices connected to the FX3100:

Connection: An icon indicates the connection type for each device. (You can hover over the icon to read the type of connection.)

Device: The name of the connected device is usually the hostname set on the connected device. In rare cases, the hostname may be unavailable.

Network: Indicates whether the device is connected to the primary or guest network, or through Ethernet or USB.

Block: Select this box to disconnect a device and prevent it from reconnecting. Select **Save Changes**. The device is removed from the **Connected** list and appears in the **Blocked** list below. **NOTE:** This option is available for each device connected through Wi-Fi but is not available for your own device or devices connected via Ethernet or USB.

To view details on a device or change the name of the device as it appears in this web UI, click the **down arrow** on the right to expand the device row. The following information appears:

- **Name:** To change how the device name appears in this UI, enter a different name.
NOTE: This only changes the device name in the UI in which it is changed.
- **IPv4:** The IP address of the connected device.
- **MAC Address:** The MAC Address (unique network identifier for this connected device).
- **Link Local:** The Link-Local IPv6 address if the connected device supports IPv6.

Click the **up arrow** to collapse the row.

Blocked

This section lists all devices blocked from connecting to the FX3100.

NOTE: Since blocked devices are not currently connected, they do not have an IP address. Instead, they are identified by their name and MAC address.

To unblock a blocked device, uncheck the **Block** checkbox and select **Save Changes**. The device is removed from the **Blocked** list and appears in the **Connected** list above.

Managing settings

On the Admin web UI home page, the Settings panel shows Port Filtering information.

The screenshot shows the Admin web UI home page for the TELE2 FX3100. At the top, there is a header with the TELE2 logo and network status indicators (LAN 1, LAN 2, 5G). On the right, there is a "Sign Out" button. The main content area is divided into several sections:

- Data Usage:** Shows a circular progress bar at 0% completion, indicating 9.99 GB of data remaining. It also displays "My Plan: 10 GB Data Plan" and "Data Usage: 9.99 GB remaining". A note states "All usage is an estimate. Billing cycle ends 9/30/2022".
- Wi-Fi:** Shows "Primary Network: ON", "Network Name (SSID): FX3100-E9F8", "Password: *****", and "Guest Network: OFF".
- Settings:** This section is highlighted with a red box. It shows "Port Filtering: OFF" and a description: "Port filtering allows you to select which applications can access the internet." There are navigation arrows between the main sections.
- About:** Displays "Internet Status: Connected", "Network name: Tele2", "Technology: 5G", and "Time connected: 00:02:56:40 (ddhh:mm:ss)".
- Connected Devices:** Shows a table with one entry: "DESKTOP-EEC6LU2" under "Device" and "Primary" under "Network".
- Support:** Includes a link to "User Guide".

At the bottom left is the "inseego" logo, and at the bottom right is the URL "www.inseego.com".

To configure more system settings, select **>** from the home page Settings panel or select **Settings** from the side menu.

The Settings page includes the following tabs:

- Preferences
- Software Update
- Backup and Restore
- VPN
- APN
- Advanced

Preferences tab

You can use this tab to turn off the LED light, enable periodic reboot, and activate the external antenna port on your FX3100. You can also change how dates, time, distance, and numbers are displayed on the web UI. **NOTE:** These preferences affect packets sent to remote servers. For example, if you select a 24-hour time format, the Admin web UI, and any packets reporting time somewhere else, will display time in 24-hour format.

The screenshot shows the Admin web UI interface for the TELE2 FX3100. At the top, there is a navigation bar with icons for LAN 1, LAN 2, a signal strength icon, 'Tele2 5G', and a 'Sign Out' button. Below the navigation bar, the main menu has several tabs: Home, Data Usage, Wi-Fi, Connected Devices (with a red notification dot), Settings (which is selected and highlighted in blue), About, and Help. Under the Settings tab, there is a sub-menu with tabs: Preferences (selected), Software Update, Backup and Restore, VPN, APN, and Advanced. The Preferences sub-menu contains three configuration items with checkboxes: 'Turn off LED' (unchecked), 'Enable Periodic Reboot' (checked), and 'Enable External Antenna' (unchecked). To the right of these checkboxes are dropdown menus for Language (set to English), Date (set to mm/dd/yyyy), Time (set to 12 hr), Feet/Meters (set to Feet), and Number format (set to 3,234.00). At the bottom of the Preferences section is a blue 'Save Changes' button.

Turn off LED: Check the checkbox to turn off the LED display light on your FX3100.

Enable Periodic Reboot: Enables a periodic reboot feature that allows the device to automatically restart every two weeks. By default, the reboot occurs at 2:00 AM on Sunday.

Enable External Antenna: Check the checkbox to activate the external antenna port on your FX3100. **NOTE:** The external antenna port is for an external 3.4-5GHz antenna and will only provide support for mobile frequency bands within this range. Please contact Tele2 for available bands at your location.

Language: Select a language for the Admin web UI.

Date: Select the date format to be used throughout the web UI (mm/dd/yyyy or dd/mm/yyyy).

Time: Select the time format to be used throughout the web UI (12 or 24 hour).

Feet/Meters: Select the format for distance displayed in the web UI (feet or meters).

Number format: Choose the format for decimal numbers displayed in the web UI (using a period or comma as the decimal point).

Make your selections and click **Save Changes** to update settings.

Software Update tab

Software updates are delivered to the FX3100 automatically over the mobile network. This tab displays your current software version, last system update information, software update history, and allows you to check for new software updates.

The screenshot shows the TELE2 FX3100 user interface with the 'Software Update' tab selected. The left sidebar includes links for Home, Data Usage, Wi-Fi, Connected Devices (with a red notification dot), Settings (selected), About, and Help. The main content area has tabs for Preferences, Software Update (selected), Backup and Restore, VPN, APN, and Advanced. Under 'Current Software', it lists Modem Software Version (THN-1.40.1 [2022-09-23 11:53:04]), OS Version (5.4), App Version (2.532), Cute Version (3J), and PRI Version (107). Below this is a 'Check for New Software Update' section with a 'Check for Update' button. The 'Last Software Update' section indicates 'No updates applied.' The 'Software Update History' section shows 'Software version: 3J(L2.532 MTHN-1.40.1 [2022-09-23 11:53:04])'. The top right corner shows network status icons for LAN 1, LAN 2, Tele2 5G, and a sign-out link.

Current Software

Modem Software Version: The version of software currently installed for the modem component.

OS Version: The version number for the Operating System and its components.

App Version: The app version currently installed.

Cute Version: The cute version of the software currently installed on your FX3100.

PRI Version: The configuration version currently applied to your FX3100.

Check for New Software Update

Last check for update: The date and time the FX3100 last checked to see if an update was available.

Update status: This area is usually blank. If you check for an update, the results display.

Check for Update: Click this button to manually check for available software updates. If a new software update is available, it is automatically downloaded.

Last Software Update

This section displays details about the last software update.

Software Update History

This section displays details of the last updates that have been downloaded and installed to this device. If no updates have been installed, this section is not displayed.

Backup and Restore tab

Use this tab to back up current FX3100 settings to a file on your computer, restore (upload) a previously saved configuration file, reset the FX3100 to factory defaults, or restart the FX3100.

The screenshot shows the Admin web interface for a TELE2 FX3100 device. The top navigation bar includes icons for LAN 1, LAN 2, a signal strength icon, 'Tele2 5G', and a 'Sign Out' button. The left sidebar has links for Home, Data Usage, Wi-Fi, Connected Devices (with a red notification dot), Settings (which is selected and highlighted in blue), About, and Help. The main content area is titled 'Settings' and contains several sections: 'Backup Configurations', 'Restore Settings', 'Restore to Factory Defaults', and 'Restart Device'. Each section contains instructions and buttons like 'Download', 'Restore now', 'Restore factory defaults', and 'Restart'. The 'Connected Devices' section in the sidebar has a red notification dot, indicating there are updates or messages.

Backup Configurations

To back up current FX3100 settings to a file on your computer, enter your Admin password in the **Admin password** field.

The default Admin password is printed on the bottom of the FX3100. If you have changed the Admin password and don't remember it, select **Sign In** in the top-right corner, click **Forgot Admin Password**, and answer the displayed security question. The current Admin password is displayed.

NOTE: If you enter an incorrect password five times in a row, you will be locked out of the Admin web UI. To unlock it, restart your FX3100.

Click the **Download** button. The file is automatically downloaded to the default Downloads folder on the device connected to the Admin web UI. This configuration file contains all settings for your FX3100.

NOTE: The backup file cannot be edited or viewed on the downloaded system or on any other device. This file can only be restored for this model of FX3100, and settings can only be viewed or changed using the Admin web UI.

Restore Settings

CAUTION! Restoring settings (uploading a configuration file) changes ALL the existing settings to match the configuration file. This may change the current Wi-Fi settings, breaking all existing connections to the FX3100 and disconnecting you from the Admin web UI.

To restore system settings from a backup settings file, enter your Admin password in the **Admin password** field.

Click **Browse** and choose a backup settings file to restore.

NOTE: You can only restore a file that was created for this model of FX3100.

Click the **Restore now** button.

Restore to Factory Defaults

Restore factory defaults: This button resets all settings to their factory default values.


CAUTION! This initiates a restart and may change the current Wi-Fi settings, breaking all existing connections to your FX3100 and disconnecting you from the Admin web UI.

Restart Device

Restart: This button turns your FX3100 off and on again.

VPN tab

The FX3100 allows you to establish secure connections to remote networks over a public network using Open VPN.

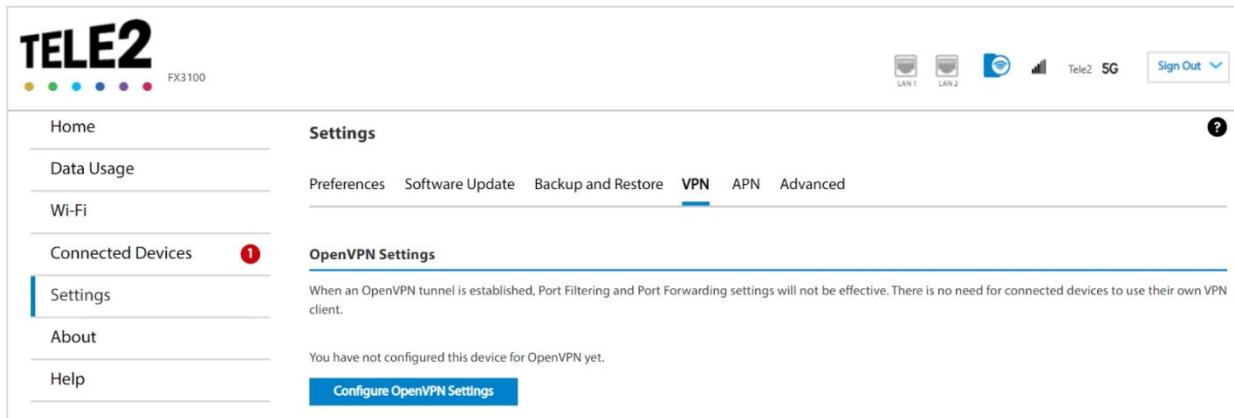

NOTE: When an Open VPN connection is established, Port Filtering and Port Forwarding settings are not effective, as traffic from all connected devices goes through the Open VPN tunnel.

OpenVPN Settings

To configure a VPN connection, click **Configure OpenVPN Settings**.

A screenshot of the 'Configure OpenVPN Settings' dialog box. It contains fields for 'OpenVPN Configuration Files' (with a placeholder 'Drag and drop files from your OpenVPN provider here.'), 'Username' (a text input field), 'Password' (a password input field with an eye icon), and an 'Auto-connect VPN:' toggle switch (which is off). At the bottom are two buttons: 'Clear All OpenVPN settings' and 'Save Changes and Connect'.

OpenVPN Configuration Files: Drag and drop the Open VPN configuration files from your Open VPN provider in the file upload area.

Username: Enter your Open VPN connection username here.

Password: Enter your Open VPN connection password here.

Auto-connect VPN: When the **ON/OFF** slider is **ON**, the VPN tunnel will automatically be established whenever an internet connection is made. When **OFF**, the VPN connection must be established manually.

Clear all OpenVPN settings: This button deletes all VPN files, logs, and resets all VPN settings.

Click **Save Changes and Connect** to save your configurations and connect to the VPN server.

VPN Connection

This section is visible once you have configured your FX3100 for Open VPN.

Connection status: Indicates the status of the Open VPN connection.

Connection time: The duration of the current Open VPN connection.

View Logs: Use this button to view Open VPN log files.

Connect: Use this button to connect the Open VPN.

APN Tab

In most configurations, the FX3100 is used with a dynamic IP and SIM and the Access Point Name (APN) is available from the network, for example: *internet*. However, if you are on a private network, you may need to configure connection profiles for your APN on this tab for the network to communicate with the FX3100.

The screenshot shows the TELE2 FX3100 web interface. The top navigation bar includes the TELE2 logo, a signal strength icon, LAN 1 and LAN 2 icons, a battery icon, and the text "Tele2 5G". On the right is a "Sign Out" button. The main menu on the left has options: Home, Data Usage, Wi-Fi, Connected Devices (with a red notification dot), Settings (which is selected and highlighted in blue), About, and Help. The "Settings" tab is active, showing sub-options: Preferences, Software Update, Backup and Restore, VPN, APN (which is also highlighted in blue), and Advanced. Below this is a "Connection Profiles" section with a table. The table has columns: Active, Profile Name, APN Name, Authentication, and IP Connection Type. A single row is shown: Active is "Broadband (Default)", Profile Name is "internet", APN Name is "internet", Authentication is "None", and IP Connection Type is "IPV4/IPv6". To the right of the table are "Edit" and "Reset" buttons. Below the table is a button labeled "Add New Connection Profile". A modal window titled "Add New Connection Profile" is open. It contains fields for "Connection Profile Name" (empty), "APN Name" (set to "internet"), "Authentication" (set to "None"), and "IP Connection Type" (set to "IPV4/IPv6"). At the bottom of the modal are "Cancel" and "Save Changes" buttons.

CAUTION! Changing the APN may cause a loss of data connectivity.

Connection Profiles

NOTE: Initially, the default APN profile is displayed. You cannot delete this profile, but you can edit it and/or add additional profiles.

Active: Select the connection profile you want to be active.

Profile Name: The name that identifies the connection profile.

APN Name: The access point name.

Authentication: The authentication method for the connection profile.

IP Connection Type: The IP connection type for the connection profile.

Click **Edit** to edit a profile.

Click **Reset** to reset a profile to default values.

Click the **Add New Connection Profile** button to add an additional APN connection profile.

Add New Connection Profile

Connection Profile Name: Enter a name to identify this connection profile.

APN Name: Select an APN supplied by your service provider from the drop-down or select **Add APN** and enter the APN for your private network in the text box that appears below.

NOTE: Information entered in the following fields should come from your service provider based on network requirements.

Authentication: Select the authentication method for your private network from the drop-down (PAP, CHAP, PAP and CHAP, or None).

Username: Enter the username for your private network. **NOTE:** This option is not visible when Authentication is set to None.

Password: Enter the password for your private network. **NOTE:** This option is not visible when Authentication is set to None.

IP Connection Type: Select an IP connection type from the drop-down (IPv4, IPv6, or IPv4/IPv6).

Click **Save Changes**.

Advanced tab

Advanced settings are intended only for users with advanced technical knowledge. For information about the Advanced Settings page, go to Chapter 4, Advanced Settings on page 55.

Viewing info about the FX3100

On the Admin web UI home page, the About panel shows current internet status, the network name, technology used, and the amount of time connected.

The screenshot shows the TELE2 Admin web UI home page. At the top right, there are icons for LAN 1, LAN 2, a signal strength indicator, 'Tele2 5G', and a 'Sign Out' button. Below this, the 'Data Usage' section displays a circular progress bar indicating 0% usage of a 10 GB data plan, with 9.99 GB remaining. It also shows 0.01 GB data used and 9.99 GB data remaining. A note states 'All usage is an estimate. Billing cycle ends 9/30/2022'. To the right of this is the 'About' panel, which is highlighted with a red box. The 'About' panel contains information: Internet Status: Connected; Network name: Tele2; Technology: 5G; and Time connected: 00:02:56:40 (dd:hh:mm:ss). Below the 'About' panel is the 'Connected Devices' section, which lists one device: DESKTOP-EEC6LU2 under the Network tab. The 'Connected Devices' section has tabs for Device and Network. At the bottom left is the 'inseego' logo, and at the bottom right are copyright information (© 2022 All rights reserved.) and the website address (www.inseego.com).

To view more detailed information about your FX3100 and its use, select **>** from the home page About panel or select **About** from the side menu.

The About page includes the following tabs:

- Internet Status
- Internet Sessions
- Diagnostics
- Device Info
- Logs

Internet Status tab

Use the Internet Status tab to view general internet connection and system information.

The screenshot shows the TELE2 FX3100 user interface. At the top left is the TELE2 logo with a color bar and the model number FX3100. On the right are icons for LAN1, LAN2, a signal strength meter, 'Tele2 5G', and a 'Sign Out' button. The main menu on the left includes Home, Data Usage, Wi-Fi, Connected Devices (with a red notification dot), Settings, About (which is selected), and Help. The 'About' section has tabs for Internet Status (selected), Internet Sessions, Diagnostics, Device Info, and Logs. The 'Internet Status' tab displays the following information:

General	
Status:	Connected
Network Name:	Tele2
Technology:	5G
Time Connected:	00:03:16:54 (dd:hh:mm:ss)
Received:	2.90 MB
Transmitted:	669.23 KB

IPv4	
IP Address:	26.121.119.107
Mask:	255.255.255.248
Gateway:	26.121.119.108
DNS:	10.177.0.34

IPv6	
IP Address:	2607:fb90:4afca:494:64f7:1114:63ae:a8fe

General

Status: The current status of the FX3100 connection.

Network Name: The name of the network for the current internet session.

Technology: Indicates the current cellular data connection, for example, 5G.

Time Connected: The amount of time that has elapsed since the connection for the current internet session was established.

Received: The amount of data received for the current internet session. This counter starts at zero when the connection is established.

Transmitted: The amount of data transmitted for the current internet session. This counter starts at zero when the connection is established.

IPv4

IP Address: The internet IP address assigned to the FX3100.

Mask: The network mask associated with the IPv4 address.

Gateway: The gateway IP address associated with the IPv4 address.

DNS: The Domain Name Server currently used by the FX3100.

IPv6

IP Address: The global IPv6 address for the FX3100 (blank if IPv6 is turned off or is not supported by the current network connection or operator).

Internet Sessions tab

Use the Internet Sessions tab to export and view internet session data.

The screenshot shows the TELE2 FX3100 web interface. At the top, there's a navigation bar with the TELE2 logo and a 'Sign Out' button. Below the logo, there are icons for LAN 1 and LAN 2, signal strength, and network status. The main menu on the left includes Home, Data Usage, Wi-Fi, Connected Devices (with a red notification dot), Settings, About (which is selected), and Help. The 'About' section has a sub-menu with 'Internet Sessions'. The main content area is titled 'Export Internet Sessions Information' and contains a note about session information not being used for billing. A large table lists internet sessions from 9/30/2022 11:29:29 AM to 9/30/2022 12:12:50 PM. The table columns are Date/Time, Duration, Received Data, Transmitted Data, Total Data, IPv4 Address, and IPv6 Address. Each row provides detailed statistics for a specific session.

Date/Time	Duration	Received Data	Transmitted Data	Total Data	IPv4 Address	IPv6 Address
9/30/2022 11:29:29 AM	00:00:03:31	499.86 KB	329.70 KB	829.55 KB	26.229.141.36	2607:fb90:4a33:7aa9:c44e:dcff:2f1:831
9/30/2022 11:35:12 AM	00:00:00:02	0 B	0 B	0 B	0.0.0.0	2607:fb90:4a4e:45fb:f830:9fc:a6b6:810f
9/30/2022 11:35:18 AM	00:00:02:29	1.16 MB	184.28 KB	1.34 MB	26.229.141.36	2607:fb90:4a39:e6e2:f575:a991:cf33:d558
9/30/2022 11:37:53 AM	00:00:01:02	176 B	468 B	644 B	26.229.141.36	2607:fb90:4a2a:b05:b5aa:27dd:2ff:6059
9/30/2022 11:47:21 AM	00:00:01:47	1.29 MB	11.64 KB	1.30 MB	26.125.186.126	2607:fb90:4aee:1875:f113:159c:e5a1:3310
9/30/2022 11:49:11 AM	00:00:01:50	20.17 KB	6.41 KB	26.57 KB	26.229.141.36	2607:fb90:4a33:4beb:598d:9165:c2a5:3449
9/30/2022 11:51:05 AM	00:00:04:56	58.46 KB	32.36 KB	90.82 KB	26.229.141.36	2607:fb90:4a3d:a504:6ccb:b43:bcfc:5a2
9/30/2022 11:59:15 AM	00:00:00:01	0 B	0 B	0 B	0.0.0.0	2607:fb90:4ae8:9ed5:24ef:f93:aa:07:7624
9/30/2022 12:02:44 PM	00:00:00:22	1.36 MB	24.96 KB	1.38 MB	26.125.186.126	2607:fb90:4afb:fe01:4564:6482:c394:61b9

Export Internet Sessions Information

Click the **Export** button to export internet session data.

Internet Sessions

NOTE: Internet sessions are presented in date order.

Date/Time: The date and time the internet session began.

Duration: The total amount of time for the internet session.

Received Data: The amount of data received for the internet session. This counter starts at zero when the connection is established.

Transmitted Data: The amount of data transmitted for the internet session. This counter starts at zero when the connection is established.


Total Data: The total amount of data for the internet session. This is the sum of Received Data and Transmitted Data.

IPv4 Address: The IP address for the session.

IPv6 Address: The global IPv6 address for the session (blank if IPv6 is turned off or is not supported by the current network connection or service provider).

Diagnostics tab

This tab displays detailed information used solely for troubleshooting or technical support.

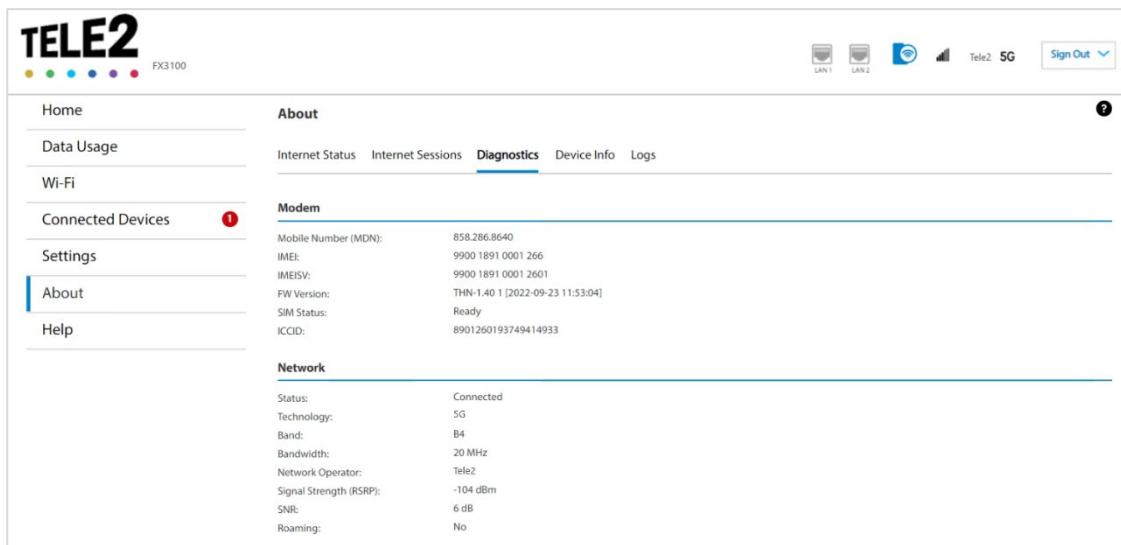

The screenshot shows the TELE2 FX3100 user interface with the 'Diagnostics' tab selected. The left sidebar includes links for Home, Data Usage, Wi-Fi, Connected Devices (with a red notification badge), Settings, About (which is selected), and Help. The main content area is divided into sections: Modem and Network. The Modem section displays various device identifiers and status: Mobile Number (MDN) 858.286.8640, IMEI 9900 1891 0001 266, IMEISV 9900 1891 0001 2601, FW Version THN-1.40.1 [2022-09-23 11:53:04], SIM Status Ready, and ICCID 8901260193749414933. The Network section shows the connection status: Status Connected, Technology 5G, Band B4, Bandwidth 20 MHz, Network Operator Tele2, Signal Strength (RSRP) -104 dBm, SNR 6 dB, and Roaming No.

Modem

Mobile Number (MDN): The phone number of your FX3100.

IMEI: The International Mobile Equipment Identity (IMEI) for your FX3100. This is a 15-digit code used to uniquely identify an individual mobile station. The IMEI does not change when the SIM is changed.

IMEISI: A combination of the IMEI and an approval number for this type of device.

FW Version: The version of the firmware (software) currently installed on your FX3100.

SIM Status: The status of the SIM card. If the SIM card is missing, or there is some form of SIM error, connection to the mobile network is not possible.

ICCID: The unique ID number assigned to the SIM card. This field is blank if there is no SIM card installed, or a SIM error condition exists.

Network

Status: The status of the network.

Technology: Indicates the current cellular data connection, for example, 5G.

Band: The band in use for the current connection.

Bandwidth: The bandwidth in use for the current connection.

Network Operator: The name of the Mobile Network Operator (MNO).

Signal Strength (RSRP): The strength of the cellular signal, measured in dBm. Higher absolute values indicate a stronger signal, for example: -80 dBm is a stronger signal than -90 dBm.

SNR: Signal to Noise Ratio. A ratio of signal power to noise power expressed in decibels. SNR is a positive value, and higher numbers are better.

Roaming: Indicates whether roaming is on.

Device Info tab

Use this tab to view details about your FX3100.

The screenshot shows the TELE2 Device Info tab interface. The left sidebar includes links for Home, Data Usage, Wi-Fi, Connected Devices (with a red notification dot), Settings, About (which is selected), and Help. The main content area has tabs for Internet Status, Internet Sessions, Diagnostics, Device Info (which is selected and highlighted in blue), and Logs. Under the General section, it lists Manufacturer (Inseego) and Model (FX3100). Under Software Components, it lists Modem Software Version (THN-1.40.1 [2022-09-23 11:53:04]), Wi-Fi Firmware Version (1.1.0.0.2917.1), OS Version (5.4), App Version (2.532), Cute Version (3J), and PRI Version (107).

General

Manufacturer: Inseego.

Model: The model of this device.

Software Components

Modem Software Version: The version of software currently installed for the modem component.

Wi-Fi Firmware Version: the version of firmware (software) currently installed for the Wi-Fi component.

OS Version: The version number for the Operating System and its components.

App Version: The app version currently installed.

Cute Version: The cute version of the software currently installed on your FX3100.

PRI Version: The configuration version currently applied to the FX3100.

Logs Tab

Use this tab to view log information for troubleshooting.

The screenshot shows the TELE2 FX3100 device interface. At the top, there's a navigation bar with icons for LAN 1, LAN 2, a signal strength icon, 'Tele2 5G', and a 'Sign Out' button. Below the navigation bar is a sidebar with links: Home, Data Usage, Wi-Fi, Connected Devices (with a red notification dot), Settings, About (which is selected and highlighted in blue), and Help. The main content area is titled 'About' and has tabs for Internet Status, Internet Sessions, Diagnostics, Device Info, and Logs (which is also selected). A success message says 'Your changes were saved successfully.' Below this, under 'Log Settings', it says 'Logs are for troubleshooting, and are not needed for normal operation.' and 'Note: If the system log is full, then the oldest data is discarded, regardless of this setting.' There are checkboxes for 'Turn On Logging' (which is checked) and 'Automatically Clear Logs' (set to 'After 3 days'). A 'Save Changes' button is present. The main pane displays log entries from the mobile network log:

```
Sep 30 19:12:36 mifi modem2d: [MDM_MAIN]:[notice] - {mifios_wanevent}:Service State: LTE
Sep 30 19:12:36 mifi modem2d: [MDM_MAIN]:[notice] - {mifios_wanevent}:Service State: LTE
Sep 30 19:12:36 mifi modem2d: [MDM_MAIN]:[notice] - {mifios_wanevent}: not roaming
Sep 30 19:12:36 mifi modem2d: [MDM_MAIN]:[notice] - {mifios_wanevent}: INTERNET IPV4 Call state idle
Sep 30 19:12:36 mifi modem2d: [MDM_MAIN]:[notice] - {mifios_wanevent}: INTERNET IPV6 Call state idle
Sep 30 19:12:36 mifi modem2d: [MDM_MAIN]:[notice] - AAN: {mifios_wanevent}: Multi APN SWAP start- imsi: 310260194941493, iccid: 8901260193749414933
Sep 30 19:12:36 mifi modem2d: [MDM_MAIN]:[notice] - AAN: {mifios_wanevent}: Multi APN SWAP start- imsi: 310260194941493, iccid: 8901260193749414933
```

At the bottom of the log pane are three buttons: Refresh, Clear Log, and Export Logs.

Log Settings

Turn On Logging: Check this box to turn on logs as needed.

Automatically Clear Logs: Use the drop-down list to select when logs are cleared. **NOTE:** If the log is full, the oldest data is deleted regardless of this setting.

Click **Save Changes** to enact changes.

If logs are turned on, the following are visible:

Click on **Mobile Network Log** for log data of connections to the mobile network.

Click on **Device Log** for log data of events other than mobile data connections that occurred on this device.

Refresh: Updates the displayed log data.

Clear Log: Deletes all existing log data. This makes new data easier to read.

Export Logs: Allows you to export log data.

Getting support

On the Admin web UI home page, the Support panel provides a link to this user.

The screenshot shows the TELE2 Admin web UI home page for a device labeled FX3100. The top navigation bar includes the TELE2 logo, a color bar, and icons for LAN 1, LAN 2, and 5G connectivity. A 'Sign Out' button is also present. The main content area is divided into several sections:

- Data Usage:** Shows a circular progress bar at 0% completion, indicating 9.99 GB of data remaining. It also displays "My Plan: 10 GB Data Plan" and "Data Usage: 9.99 GB remaining".
- About:** Provides information about the device: Internet Status: Connected, Network name: Tele2, Technology: 5G, and Time connected: 00:02:56:40 (dd:hh:mm:ss).
- Connected Devices:** A table showing one device connected: DESKTOP-EEC6LU2 under the Primary network.
- Wi-Fi:** Settings for the primary network: ON, Network Name (SSID): FX3100-E9F8, Password: (redacted), and Guest Network: OFF.
- Settings:** Port Filtering: OFF. A note states: "Port filtering allows you to select which applications can access the internet."
- Support:** A section containing a "User Guide" link. This entire section is highlighted with a red box.

At the bottom left is the inseego logo, and at the bottom right is the copyright notice "© 2022 All rights reserved." and the website "www.inseego.com".

To view more support information, select **>** from the home page Support panel or select **Help** from the web UI side menu.

The Help page includes two tabs:

- Help
- Customer Support

Help tab

This page provides links to help topics for every page of the Admin web UI and general topics useful for getting started with your FX3100.

The screenshot shows the Admin web UI of a TELE2 FX3100 router. The top navigation bar includes the TELE2 logo, a color bar, and the model name 'FX3100'. On the right are icons for LAN 1, LAN 2, 5G signal strength, 'Tele2 5G', and a 'Sign Out' button. The left sidebar has a vertical menu with 'Home', 'Data Usage', 'Wi-Fi', 'Connected Devices' (with a red notification dot), 'Settings', 'About', and 'Help' (which is selected). The main content area is titled 'Help' and contains two sections: 'Using Your FX3100' (with 'Overview', 'Setup', and 'Tips') and 'Admin Website Help' (with links to 'Admin Password', 'Messages', 'Data Usage', 'Wi-Fi - Settings', 'Wi-Fi - Primary Network', 'Wi-Fi - Guest Network', 'Connected Devices', 'Preferences', 'Software Update', 'Backup and Restore', 'VPN', 'APN', 'About - Internet status', 'About - Internet sessions', 'About - Diagnostics', 'About - Device info', and 'About - Logs'). A 'Advanced' section on the right lists 'Cellular', 'Manual DNS', 'SIM', 'Firewall', 'MAC Filter', 'LAN', 'Port Filtering', and 'Port Forwarding'.

Customer Support tab

Use the Customer Support tab for useful links and support information.

The screenshot shows the TELE2 FX3100 device interface. At the top left is the TELE2 logo with a color bar and the model number FX3100. On the right are icons for LAN 1, LAN 2, signal strength, and 5G connectivity, along with a 'Sign Out' button. A vertical navigation menu on the left includes Home, Data Usage, Wi-Fi, Connected Devices (with a red notification dot), Settings, About, and Help. The Help section is currently selected. The main content area has a blue header 'Help' and a sub-header 'Customer Support'. Below this is a section titled 'Your Device' containing device details: Model (FX3100-2), Your Wireless Number (858.286.8640), User Guide (link to FX3100 User Guide), and Manufacturer (link to www.inseego.com). At the bottom is a 'Customer Support' section with the text 'Contact your service provider or reseller for assistance.'

Your Device

Model: Model of the device.

Your Wireless Number: The phone number associated with your FX3100.

User Guide: A link to this User guide.

Manufacturer: A link to the Inseego website.

Customer Support

Contact your service provider or reseller for customer support.

3

Advanced settings

[Overview](#)

[Using advanced settings](#)

Overview

Advanced settings are intended for users with technical expertise in telecommunication and networking.

WARNING! Changing the Advanced settings may be harmful to the stability, performance, and security of the FX3100.

Using advanced settings


When you select the **Advanced** tab on the Settings page, a warning message appears. If you click **Continue**, the Network tab of the Advanced Settings page appears.

Advanced settings include:

- Cellular
- Manual DNS
- SIM
- Firewall
- MAC Filter
- LAN
- Port Filtering
- Port Forwarding

Cellular tab

Use this tab to set options for the cellular network.

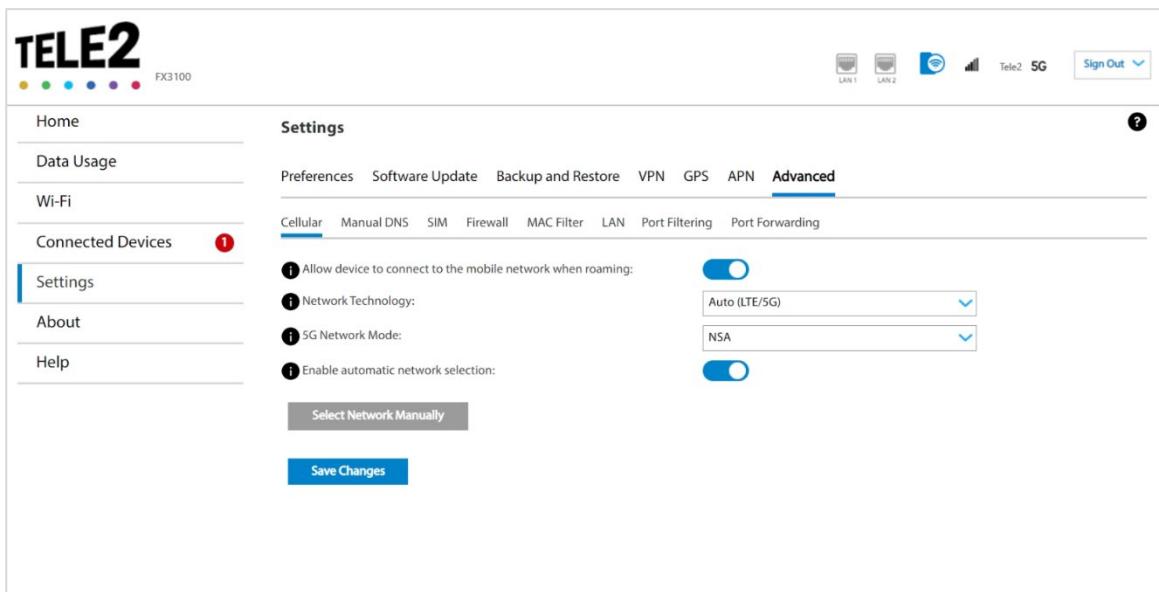

Cellular Network Technology

Allow device to connect to the mobile network while roaming: Use the **ON/OFF** slider to turn off cellular data and prevent access to the mobile network when roaming.

Network Technology: Your FX3100 is set to Auto (LTE/5G) by default, which prioritizes 5G but allows 4G and other non-5G technologies to be used. If you select 4G LTE or 5G from the drop-down, your FX3100 is restricted from connecting to networks not using that technology, for example: if you select 4G LTE, your FX3100 will be unable to connect to 5G networks.

5G Network Mode: Your FX3100 is set to Auto (NSA/SA) by default, allowing it to use both standalone 5G and non-standalone 5G, which utilizes 4G anchor bands. You can use the drop-down to select non-standalone (NSA) or standalone (SA) 5G network modes.

Enable automatic network selection: When the **ON/OFF** slider is **ON**, your FX3100 automatically selects the best 5G available network and you cannot use the **Select Network Manually** button below.

Select Network Manually: You may wish to use this option if multiple networks are available, and you have a preference. Click the button to scan for available networks, then choose the preferred network.

NOTE: This option is available only if **Enable automatic network selection** is off.

Click **Save Changes**. The device will reboot for changes to take effect.

Manual DNS tab

The FX3100 automatically selects a Domain Name Server (DNS). This page allows you to manually assign up to two DNS IP addresses.

The screenshot shows the TELE2 FX3100 web interface. At the top, there's a navigation bar with icons for LAN 1, LAN 2, signal strength, Tele2 5G, and a Sign Out button. Below the bar, the main menu has 'Home', 'Data Usage', 'Wi-Fi', 'Connected Devices' (with a red notification dot), 'Settings' (selected), 'About', and 'Help'. Under 'Settings', the 'Advanced' tab is selected, showing sub-options: Cellular, Manual DNS (selected), SIM, Firewall, MAC Filter, LAN, Port Filtering, and Port Forwarding. The 'Manual DNS' section contains instructions: 'Your device automatically selects a Domain Name Server (DNS) or you can manually set one.' It includes a checkbox for 'Turn on manual DNS', a required field for 'DNS 1 IP address' (labeled 'Required (IPv4 or IPv6 address)'), and an optional field for 'DNS 2 IP address' (labeled 'Optional (IPv4 or IPv6 address)'). A blue 'Save Changes' button is at the bottom.

Manual DNS

Turn on manual DNS: Check this box to manually select a DNS.

DNS 1 IP address: Enter the IP address for the primary DNS. This address is required to use the Manual DNS feature.

DNS 2 IP address: Enter the IP address for the secondary (backup) DNS. This address is optional and may be left blank if desired.

Click **Save Changes**.

SIM tab

The SIM card in your FX3100 can be locked using a PIN. If the SIM card is locked, you must enter the PIN before connecting to the mobile network. Once entered, the PIN is remembered until the next shutdown. You may also need to provide the existing PIN to change a SIM. The default PIN is available from your service provider.

Use this page to unlock your SIM or enter a SIM PIN.

The screenshot shows the TELE2 FX3100 SIM Settings page. The left sidebar has links for Home, Data Usage, Wi-Fi, Connected Devices (with a red exclamation mark), Settings (selected), About, and Help. The main content area has tabs for Preferences, Software Update, Backup and Restore, VPN, GPS, APN, and Advanced (selected). Under Advanced, there are sub-tabs for Cellular, Manual DNS, SIM (selected), Firewall, MAC Filter, LAN, Port Filtering, and Port Forwarding. The SIM Settings section contains the following information:

- SIM PIN Lock:** Off
- SIM Status:** Ready
- Desired Action:** Turn on PIN Lock
- Current PIN:** [Redacted input field]

A note at the bottom says: "For additional security, the SIM card can be locked with a PIN code. When locked, the PIN code must be entered before the device will connect to the internet." Another note below it says: "3 attempts remain until your SIM is permanently locked." At the bottom right is a "Save Changes" button.

SIM Settings

SIM PIN lock: The status of the SIM PIN lock.

SIM Status: The current status of the SIM card. Possible states include:

- **Ready** – No SIM PIN is needed.
- **PIN Locked** - SIM PIN must be entered before you can use the mobile network. **NOTE:** If an incorrect PIN is entered too many times, the SIM becomes PUK locked. A counter indicates how many incorrect entries will cause PUK lock. Once PUK locked, the PUK must be obtained from your service provider.
- **PUK Locked** - PUK (personal unblocking key) for the SIM must be entered in order to continue. The PUK can be obtained from your service provider. Enter the PUK. Enter and confirm a new PIN and click **Unlock**. **NOTE:** If an incorrect PUK is entered too many times, the SIM becomes permanently unusable. You will need to obtain a new SIM. A counter indicates how many entry attempts remain.
- **Unlocked** - SIM PIN was needed but has already been entered.
- **No SIM** - No SIM is detected. Check that the SIM is inserted correctly.
- **SIM Error** - SIM is detected but is not responding as expected and cannot be used.

Desired Action: The actions available depend on the SIM status. Possible operations include:

Turn on PIN Lock - Sets the SIM so that entry of a PIN is required upon startup to connect to the mobile network. To perform this operation, you must enter the current PIN.

Turn off PIN Lock - Turns off a PIN lock that was previously turned on so that entry of a PIN is no longer required to connect to the mobile network. To perform this operation, you must enter the current PIN.


Change PIN: Allows you to change the SIM PIN. You must enter the current PIN, then enter the new PIN and confirm it.

Current PIN: Enter the current PIN. **NOTE:** The default SIM PIN is available from your service provider.

Click **Save Changes**.

Firewall tab

The FX3100 firewall determines which internet traffic is allowed to pass between the FX3100 and connected devices and protects your connected devices from malicious incoming traffic from the internet. The firewall cannot be turned off. Use the Firewall tab to allow VPN Passthrough and/or designate a specific device to receive all traffic.

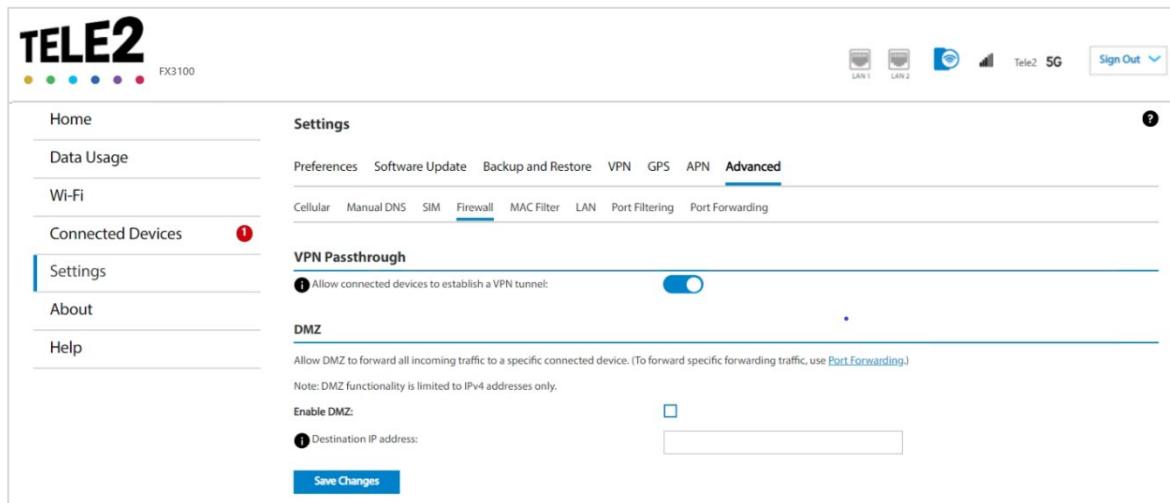

VPN Passthrough

To allow connected devices to establish a VPN tunnel, ensure the ON/OFF slider is **ON**.

DMZ

NOTE: When IP Passthrough is turned on, DMZ capabilities are set through the connected host routing system. Settings in this section are not available. Go to **Advanced > LAN** to turn IP Passthrough off.

To allow DMZ, you need a static IP address assigned to your line of service. Contact your service provider to set up a line of service for static IP.

Enable DMZ: Check this box to allow DMZ. DMZ allows the connected device specified as the DMZ IP address (Destination IP address) to receive all traffic that would otherwise be blocked by the firewall.

Allowing DMZ may assist some troublesome network applications to function properly, but the DMZ device should have its own firewall to protect itself against malicious traffic.

Destination IP address: Enter the IP address of the connected device you wish to become the DMZ device (the DMZ destination). **NOTE:** You can check the IP address of each connected device on the Connected Devices screen.

Click **Save Changes**.

MAC Filter tab

The MAC filter allows only selected devices to access the FX3100 network through DHCP. By default, MAC filter is turned off.

Use this tab to turn the MAC Filter on and specify device access.

The screenshot shows the TELE2 FX3100 web interface. At the top, there is a navigation bar with icons for LAN1, LAN2, a blue circular icon, signal strength, 'Tele2 5G', and a 'Sign Out' button. Below the navigation bar is a left sidebar with links: Home, Data Usage, Wi-Fi, Connected Devices (with a red notification dot), Settings (selected), About, and Help. The main content area has a 'Settings' header and a 'MAC Filter Configuration' section. It includes instructions on how to use the MAC filter, a note that it doesn't affect the Guest Wi-Fi network, and a toggle switch labeled 'MAC filter:' which is currently off. Below the switch is a table listing devices. The first row shows 'DESKTOP-EEC6LU2' with MAC address '00:15:ff:00:01:26', status 'Your device', and a checked 'MAC Address Filter' checkbox. There are also 'Delete' and 'Edit' buttons for this row. A second row is partially visible with empty fields. At the bottom of the table are three buttons: 'Save Changes' (blue), 'Add new device' (white), and 'Refresh list' (light blue).

MAC Filter Configuration

To use the MAC filter, select the device(s) from the device list that you want to be allowed to connect to the network through DHCP and move the **MAC filter ON/OFF** slider to **ON**. Click **Save Changes**.

CAUTION! Turning on MAC filtering immediately disconnects all devices that are not included in the filter from the network.

This list includes all devices currently connected to the FX3100.

Add new device: Use this button to add a device to the device list, then enter the device name, MAC address, and choose whether to select the **MAC Address Filter** checkbox.

To delete a device from the list, select its **Delete** checkbox and click **Save Changes**.

To discard any unsaved changes and refresh the list, click **Refresh list** and **Confirm**.

LAN tab

This page provides settings and information about the FX3100 local area network (LAN). The LAN consists of the device and all connected devices.

The screenshot shows the TELE2 FX3100 web interface with the 'LAN' tab selected. The left sidebar includes links for Home, Data Usage, Wi-Fi, Connected Devices (with a red notification dot), Settings (selected), About, and Help. The main content area has tabs for Preferences, Software Update, Backup and Restore, VPN, GPS, APN, and Advanced (selected). Under Advanced, there are sub-tabs for Cellular, Manual DNS, SIM, Firewall, MAC Filter, LAN (selected), Port Filtering, and Port Forwarding. The 'IP Passthrough' section contains fields for 'Turn on IP Passthrough' (checkbox), 'IPPT Interface' (Ethernet 2 dropdown), and 'MAC Address'. The 'IPv4' section includes fields for IP Address (192.168.1.1), Subnet Mask (255.255.255.0), MAC Address (18:ee:86:62:e9:f8), Turn on DHCP Server (checkbox checked), DHCP Lease Time (1440 minutes), Start DHCP Address Range at (192.168.1.2), and End DHCP Address Range at (192.168.1.102). A 'Reserved IP Addresses' button is also present. The 'IPv6' section includes fields for Turn on IPv6 (checkbox checked) and Link-Local Address (fe80:c08b:ffff:fe85:f2be). At the bottom is a 'Save Changes' button.

IP Passthrough

IP Passthrough (IPPT) enables the first device detected on the specified LAN port to obtain the IP address assigned by the mobile network. IPPT allows you to enable a one-to-one connection to a host routing system. **NOTE:** When IP Passthrough is on, devices on other interfaces function normally. However, when IPPT is enabled, the following capabilities are set through the host routing system and web UI settings are not available:

- DMZ (Firewall)
- Port Filtering
- Port Forwarding

Turn on IP Passthrough: Check the box to enable IP Passthrough.

IPPT Interface: Select an interface from the drop-down (Ethernet1, Ethernet2, or USB).

Hostname: When enabling IPPT on the USB interface, enter the hostname of the device connected for IP Passthrough. This is the only USB-connected device that can obtain the IP address assigned to the mobile network. You can view the hostname on the Home or Connected Devices page.

MAC Address: When enabling IPPT on an Ethernet interface, enter the MAC address of the device connected for IP Passthrough. This is the only device connected to the selected Ethernet port that can obtain the IP address assigned to the mobile network.

IPv4

IP Address: The IP address for your FX3100, as seen from the local network. Normally, you can use the default value.

Subnet Mask: The subnet mask network setting for the FX3100. The default value 255.255.255.0 is standard for small (class "C") networks. If you change the LAN IP Address, make sure to use the correct Subnet mask for the IP address range of the LAN IP address.

MAC Address: (read-only) The Media Access Controller (MAC) Address for the Wi-Fi interface on your FX3100. The MAC address is a unique network identifier assigned when a network device is manufactured.

Turn on DHCP server: This checkbox turns the DHCP Server feature on or off. This should be left checked. The DHCP server allocates an IP address to each connected device. **NOTE:** If the DHCP Server is turned off, each connected device must be assigned a fixed IP address.

DHCP Lease Time: The number of minutes in which connected devices must renew the IP address assigned to them by the DHCP server. Normally, this can be left at the default value, but if you have special requirements, you can change this value.

Start DHCP Address Range at: The start of the IP address range used by the DHCP server. If the IP is set on the client device, use an IP address outside of this DHCP range; if the IP address is set using an IP reservation, it will usually be inside this range. **NOTE:** Only expert users should change this setting.

End DHCP Address Range at: The end of the IP address range used by the DHCP server. If the IP is set on the client device, use an IP address outside of this DHCP range; if the IP address is set using an IP reservation, it will usually be inside this range. **NOTE:** Only expert users should change this setting.

Reserved IP Addresses: Use this button to set up reserved IP addresses. Reserved IP addresses ensure that a connected device will always be allocated the same IP Address.

IPv6

Turn on IPv6: Check the box if the connected device supports IPv6. This enables IPv6 connected devices to make IPv6 connections to the internet.

Link-Local Address: The Link-Local IPv6 address if the connected device supports IPv6.

Click **Save Changes** to activate and save new settings.

Port Filtering tab

Port Filtering allows you to block outgoing internet connections and permit only selected applications to access the internet. Traffic is identified by port numbers. Some applications are pre-defined. You can define additional applications if you know the details of the traffic used and generated by the applications.

The screenshot shows the TELE2 FX3100 router's web-based configuration interface. The top navigation bar includes the TELE2 logo, signal strength indicators, and a 'Sign Out' button. The left sidebar has links for Home, Data Usage, Wi-Fi, Connected Devices (with a red notification dot), Settings (selected), About, and Help. The main content area is titled 'Settings' and has tabs for Preferences, Software Update, Backup and Restore, VPN, GPS, APN, and Advanced (selected). Under Advanced, there are sub-tabs for Cellular, Manual DNS, SIM, Firewall, MAC Filter, LAN, Port Filtering (selected), and Port Forwarding. The 'Port Filtering Configuration' section contains a note about traffic selection and a 'Port Filtering' slider set to 'ON'. The 'Applications' section lists pre-defined protocols: Email (POP3, IMAP, SMTP), FTP, HTTP, HTTPS, and Telnet, each with an unchecked checkbox. The 'Custom Applications' section shows a table with one row for 'Custom App 1' (checked, App Name: 'Custom App 1', Start Port: blank, End Port: blank, Protocol: TCP). Buttons at the bottom include 'Save Changes' and 'Add custom application'.

NOTE: When IP Passthrough is turned on, port filtering capabilities are set through the connected host routing system. Settings on this page are not available. Go to **Advanced > LAN** to turn IP Passthrough off.

Port Filtering Configuration

Port Filtering: To turn on port filtering, move the **ON/OFF** slider to **ON**. To turn off port filtering, so that any application can connect to the internet, move the slider to **OFF**.

Applications

Select the applications you want to be able to access the internet.

The following table provides port numbers and protocol information for each port filtering application listed.

Application Name	Port	TCP*	STCP*	UDP*
Email				
POP3	110	Yes	No	Assigned
POP3S	995	Yes	No	Yes
IMAP	143	Yes	No	Assigned
IMAPS	993	Yes	No	Assigned
SMTP	25	Yes	No	Assigned
SecureSMTP	465	Yes	No	No
FTP control (command)	21	Yes	Yes	Assigned
FTP data transfer	20	Yes	Yes	Assigned
HTTP	80	Yes	Yes	Assigned
HTTPS	443	Yes	Yes	Assigned
Telnet	23	Yes	No	Assigned

Custom Applications

Use the **Add custom application** button to add a new row to the custom application list.

On: Check this box if you want the new application to be able to access the internet.

App Name: Enter a name for the custom application.

Start Port: Enter the beginning of the range of port numbers used by outgoing traffic for the custom application being added.

End Port: Enter the end of the range of port numbers used by the application.

NOTE: If the application uses a single port instead of a range, type the same value for both the **Start Port** and the **End Port**.

Protocol: Select the protocol used by the port range from the drop-down list (TCP, UDP, or both).

Delete: Check this box to delete a custom application. **NOTE:** Click on the Port Filtering tab again to remove deleted custom applications from view on the screen.

Click **Save Changes** to save any changes made to the custom applications.

* **Yes** indicates the protocol is standardized for the port number.

No indicates the protocol is not standardized for the port number.

Assigned indicates the port number is assigned by IANA (Internet Assigned Numbers Authority) for protocol use but may not be standardized.

Port Forwarding tab

Port Forwarding allows specific applications to be forwarded to a particular device connected to your network. Normally, the built-in firewall blocks incoming traffic from the internet. Port forwarding allows internet users to access any server you are running on your computer, such as a web, FTP, or Email server.

Important: Port forwarding creates a security risk and should not be turned on unless it is required.

NOTE: To configure Port Forwarding, you need a static IP address assigned to your line of service. Contact your service provider to set up a line of service for static IP.

Some mobile networks provide you with an IP address on their own network rather than an internet IP address. In this case, Port Forwarding cannot be used, because internet users cannot reach your IP address.

The screenshot shows the TELE2 FX3100 router's web-based configuration interface. The top navigation bar includes the TELE2 logo, signal strength indicators, and a 'Sign Out' button. The left sidebar has links for Home, Data Usage, Wi-Fi, Connected Devices (with a red notification dot), Settings (selected), About, and Help. The main content area is titled 'Settings' and has tabs for Preferences, Software Update, Backup and Restore, VPN, GPS, APN, and Advanced (which is selected). Under Advanced, there are sub-tabs for Cellular, Manual DNS, SIM, Firewall, MAC Filter, LAN, WAN, Port Filtering, and Port Forwarding (which is selected). The 'Port Forwarding Configuration' section contains a note about port forwarding sending specific incoming traffic to a connected device, specifying its IP address. It also notes that functionality is limited to IPv4 addresses only. A toggle switch is shown as off. Below this is a table for 'Port Forwarding' with columns for Application (checkboxes for DNS, FTP, HTTP/HTTPS, NNTP, POP3/POP3S, SMTP/Secure SMTP, SNMP, Telnet, TFTP) and Application IP address. The 'Custom Applications' section allows defining custom applications with fields for On, App Name, IP Address, Port Type, Port Numbers (Ext and Int), Protocol (TCP or UDP), and Delete. Buttons for 'Save Changes' and 'Add custom application' are at the bottom.

NOTE: When IP Passthrough is turned on, port forwarding capabilities are set through the connected host routing system. Settings on this page are not available. Go to **Advanced > LAN** to turn IP Passthrough off.

Port Forwarding Configuration

Port forwarding: To turn on port forwarding, move the **ON/OFF** slider to **ON**. To turn off port forwarding, so that no inbound traffic is forwarded to a LAN client, move the slider to **OFF**.

Applications

Check the box next to each Port Forwarding application that you want to allow.

To forward all inbound WAN traffic on a specific port to a single LAN client, enter the IP address of the target device in the **Application IP address** field.

The following table provides port numbers and protocol information for each port forwarding application listed.

Application Name	Port	TCP*	STCP*	UDP*
DNS	53	Yes	No	Yes
FTP control (command)	21	Yes	Yes	Assigned
FTP data transfer	20	Yes	Yes	Assigned
HTTP	80	Yes	Yes	Assigned
HTTPS	443	Yes	Yes	Assigned
NNTP	119	Yes	No	Assigned
POP3	110	Yes	No	Assigned
POP3S	995	Yes	No	Yes
SMTP	25	Yes	No	Assigned
SecureSMTP	465	Yes	No	No
SNMP	161	Assigned	No	Yes
Telnet	23	Yes	No	Assigned
TFTP	69	Assigned	No	Yes

* **Yes** indicates the protocol is standardized for the port number.

No indicates the protocol is not standardized for the port number.

Assigned indicates the port number is assigned by IANA (Internet Assigned Numbers Authority) for protocol use but may not be standardized.

Custom Applications

Use the **Add custom application** button to add a new row to the custom application list. You can add up to ten custom applications. Once defined, these applications can be turned on and off the same way as pre-defined applications.

On: Check this box if you want the new application to be able to access the internet (enabling port forwarding).

App Name: Enter a name for the custom application.

IP Address: If you want to limit service for the application to a single connected device, enter the IP address of the target device. To find the IP address of a device, go to the Connected Devices page. **NOTE:** To ensure the device you are forwarding to does not have a different IP address after a reboot, either statically assign the IP address on the client device or set up a DHCP reservation.

Port Type: Use **Translate** as the port type.

Port Numbers: Use the **From** and **To** fields to specify the range of port numbers to be forwarded. **NOTE:** If the application uses a single port instead of a range, type the same value in both the **From** and **To** fields.

For translate ports, use the **Ext.** and **Int.** to specify ports. **NOTE:** Forwarding takes inbound traffic on a port to the same port on a client device. Use translate ports to send traffic to a different port on the client device. For example, instead of having inbound traffic on port 1234 forward to port 1234 of the client device, you can have it forward to port 5678.

Protocol: Select the protocol used by the port range from the drop-down list (TCP, UDP, or both).

Delete: Check this box to delete a custom application. **NOTE:** Click on the Port Forwarding tab again to remove deleted custom applications from view on the screen.

Click **Save Changes** to save any changes made to the custom applications.

4

Troubleshooting and support

Overview

Common problems and solutions

Technical support

Overview

When properly installed, the FX3100 is a highly reliable product.

The following tips can help solve many common problems encountered while using the FX3100:

- Make sure you are using the FX3100 in the correct geographic region.
- Ensure that your wireless coverage extends to your current location.
- If you do not receive a strong data signal, move the device to a different location.
- Ensure that you have an active subscription plan.
- You can resolve many issues by restarting your connected device and your FX3100.

Troubleshooting

This section can help solve many common problems and answer questions encountered while using the FX3100.

I cannot access the Admin web UI

- **Reason:** You are on the guest network. The web UI is not accessible from the guest Wi-Fi network by design.

Solution: Connect to the primary network, by USB or Ethernet.

My connecting device is not obtaining a valid IP address

There are several possible reasons your connecting device is not obtaining a valid IP address:

- **Reason:** IPPT is enabled, and you have connected a second device to your FX3100 without restarting.

When IP Passthrough (IPPT) is enabled, only the first device detected can obtain the IP address assigned by the mobile network.

Solution: When IPPT is enabled, any time you switch the device you are connecting to the FX3100, you must first disconnect the existing connected device and power cycle the FX3100 before connecting the new device.

- **Reason:** The DHCP server has been turned off.

If IPPT is not enabled, the DHCP server provides IP addresses. If the DHCP server is turned off, no IP addresses can be provided.

Solutions:

Reset your FX3100 to factory settings, see “Resetting your FX3100” on page 14.

or

Use Inseego Mobile LAN settings to turn the DHCP server on.

- **Reason:** The DHCP server has used all its IP addresses.

This is unlikely to happen with the FX3100, but if you have connected a succession of devices to your FX3100 in a short period of time, you may have used up all the IP address available.

Solution: Disconnect your connected device and power cycle the FX3100 before reconnecting a device.

- **Reason:** There is an issue with your FX3100.

Solution: Contact your service provider for assistance.

I see other networks, but not the network name for my FX3100

- **Reason:** The default multi-mode settings on your FX3100 work for most Wi-Fi clients, however, some older devices require that you set one of the Wi-Fi bands to support older BGN standards.

Solution: Set your 2.4 GHz band to **802.11 bgn**:

1. Access the FX3100 Admin web UI and navigate to **Wi-Fi > Settings**. Under **2.4 GHz Band Settings**, use the drop-down to change the 802.11 mode to **802.11 bgn**.
NOTE: This allows older devices to connect on the 2.4 GHz band but leaves the 5 GHz band in multi-mode to allow newer devices the fastest available connection.
2. Click **Save Changes**. Your FX3100 will reboot, and the network name should be visible on all devices.

I see the network name, but cannot connect a device to my FX3100

- **Reason:** The default network security settings on your FX3100 work for most Wi-Fi clients, however, some older devices may not have access.

Solution: Contact your service provider for assistance. If you are entering the correct password and still unable to connect, change the network security setting to **WPA/WPA2 Mixed Mode**:

1. Access the FX3100 Admin web UI and navigate to **Wi-Fi > Primary Network**. In the **Security** drop-down, select **WPA/WPA2 Mixed Mode**.
2. Click **Save Changes** and **Confirm**. Your FX3100 will reboot, and all devices should be able to connect.

I cannot get streaming platforms to work with my FX3100

- **Reason:** Some service provider plans include content filtering that prevents streaming over the internet connection.

Solution: Contact your service provider for assistance.

My FX3100 is getting slow speeds/low throughput

- **Reason:** Signal strength and quality are the most likely cause of slow speeds/low throughput.

NOTE: The FX3100 is configured by default to use the best connection available, so low throughput is rarely related to configuration.

Solution: Check the signal strength and quality reported by your FX3100:

1. Access the FX3100 Admin web UI and navigate to **About > Diagnostics** to check the values for **Signal Strength (RSRP)** and **SNR**.
2. **If the signal is poor**, relocate your FX3100 to improve signal conditions.

If the signal is good, but throughput is slow, check your service provider's network conditions for outages and expected performance.

Do I need an external antenna?

The external TS9 antenna ports on your FX3100 are used for high sub-6 bands (3.4GHz-5GHz). These frequencies are used for C-band and are not often used. If you are not using these bands, there is no benefit to attaching external antennas to your FX3100. Contact your service provider for available bands.

Do I need a signal amplifier or booster?

Inseego does not recommend or support the use of cellular signal amplifiers or boosters.

Cellular signal amplifiers/boosters typically work by receiving and re-transmitting specific frequencies. This can increase the amount of signal noise, which has a negative effect on connectivity. In addition, when specific frequencies are targeted, other frequencies can be effectively filtered or blocked. If not all your needed bands are supported, you may experience a worse connection.

Does the USB port support RNDIS?

You can use the USB port on the back of your FX3100 to provide a network connection via Remote Network Driver Interface Specification (RNDIS). Most major operating systems support RNDIS. There are no device-specific drivers for the USB port, so any drivers needed are related to the PC operating system.

Does the USB port support USB-C to Ethernet adapters?

The USB port does not support USB-C to Ethernet adapters. If you require additional Ethernet ports, Inseego recommends using an Ethernet switch connected to the Ethernet port.

Technical Support

IMPORTANT: Before contacting Support, be sure to restart both your connected device and your FX3100 and ensure that your SIM card is inserted correctly.

Customer Service and Troubleshooting

Refer to the Tele2 website and customer service.

More Information

Documentation for your FX3100 is available online. Go to www.inseego.com/support-documentation. Or, from the Admin website, select **Help > Customer Support**.

5

Product specifications and regulatory information

Product specifications

Regulatory information

Product certifications and supplier's declarations of conformity

Wireless communications

Limited warranty and liability

Safety hazards

Product specifications

Device

Name:	FX3100
Model:	FX3100-2
Regulatory:	FX3100-2 CE
Standards, approvals, certifications:	GCF, PTCRB REACH, RoHS, WEEE
Dimensions:	160 mm x 76 mm x 52 mm
Weight:	350 g
Ports:	2x LAN/WAN 1 Gbps 1x USB 3.1 Type C (data and tethering) 1x External antenna (1x2 TS-9)
SIM:	4FF Nano SIM
Chipset:	Qualcomm® Snapdragon™ SDX62
LED:	Status

Environmental

Operating temperature:	0° C to 40° C
Storage temperature:	-30° C to +70° C

Network connectivity*

5G NR with SA/NSA
5G sub-6 GHz
4G LTE Cat 19
4x4 MIMO sub-6 GHz
256 QAM sub-6 GHz
CBRS

* Data plan required. Coverage subject to network availability.

Wi-Fi

802.11 a/b/g/n/ac/ax

Wi-Fi 6 with 2x2 MU-MIMO

Simultaneous dual-band Wi-Fi

Multiple SSID/guest Wi-Fi support

Supports up to 64 simultaneous Wi-Fi enabled devices

Security

Secure boot

Admin security AES 256 encryption • Security hardened web interface • Password hash • Session timeout • Wi-Fi on/off control • Incorrect password lockout

Encrypted configuration
backup/restore

Advanced firewall

Wi-Fi security Wi-Fi security (WPA/WPA2/WPA3) • Wi-Fi privacy separation • Configurable DNS • MAC address filtering • NAT firewall • Port forwarding • Port filtering

Anti CSRF (OWASP)

OpenVPN

Static IP

Regulatory information



Inseego Corp. declares that FX3100-2 is in Compliance with the Radio Equipment Directive 2014/53/EU, its essential requirements, and other relevant provisions of the directive.

A full copy of the EU declaration of conformity is available at the following internet address:
<https://www.inseego.com/support/>.

The Declaration of Conformity may be also consulted at Inseego Corp., 9710 Scranton Rd., Suite 200 San Diego, USA.

This device is restricted to indoor Use Only when operating in the 5.15-5.35GHz frequency range.

	AT	BE	BG	HR	CY	CZ	DK
EE	FI	FR	DE	EL	HU	IE	
IT	LV	LT	LU	MT	NL	PL	
PT	RO	SK	SI	ES	SE	UK(NI)	
IS	LI	NO	CH	TR			



Inseego Corp. declares that FX3100-2 is in conformity with the Radio Equipment Regulations 2017, its essential requirements and other relevant provisions of the regulation.

A full copy of the UK Declaration of Conformity is available at the following internet address:
<https://www.inseego.com/support/>

The Declaration of Conformity may be also consulted at Inseego Corp., 9710 Scranton Rd., Suite 200 San Diego, USA.

Restrictions or Requirements in the UK: 5.15-5.35GHz indoor-use only.

EU/UK RF radiation exposure guidance statement

This device must be installed to provide at least 20 cm separation from the human body at all times.

Cellular external antenna considerations:

1. External Antenna(s): Not Included
2. To comply with RF Exposure Requirements, the Maximum Cellular Antenna Gain Must Not Exceed:

Cellular band	Antenna gain (dBi) including cable loss
5G-FR1: n78	12.2

Radio frequency and transmitted output power information

Band	Max power	Frequency
LTE BAND B1	24 dBm	1920-1980 MHz
LTE BAND B3	24 dBm	1710-1785 MHz
LTE BAND B4	24 dBm	1710-1785 MHz
LTE BAND B7	24 dBm	2500-2570 MHz
LTE BAND B8	24 dBm	880-915 MHz
LTE BAND B20	24 dBm	832-862 MHz
LTE BAND B28	24 dBm	703-748 MHz
LTE BAND B38	24 dBm	2570-2620 MHz
LTE BAND B39	24 dBm	1880-1920 MHz
LTE BAND B40	24 dBm	2300-2400 MHz
n1	24 dBm	1920-1980 MHz
n3	24 dBm	1710-1785 MHz
n7	24 dBm	2500-2570 MHz
n8	24 dBm	880-915 MHz
n12	24 dBm	699-716 MHz
n28	24 dBm	703-748 MHz
n38	24 dBm	2570 - 2620 MHz
n40	24 dBm	2300-2400 MHz
n41	24.5 dBm	2496-2690 MHz
n41 HPUE	27.5 dBm	2496-2690 MHz
n78	24 dBm	3300-3800 MHz
n78 HPUE	27.5 dBm	3300-3800 MHz
WLAN ISM	20 dBm	2400 – 2483.5 MHz
WLAN UNII-1	23 dBm	5150 – 5250 MHz
WLAN UNII-3	14 dBm	5725 – 5825 MHz



Product certifications and supplier's declarations of conformity

Product certifications and supplier's declarations of conformity documentation may be consulted at Inseego Corp., 9710 Scranton Road Suite 200, San Diego CA 92121, USA.

<https://www.inseego.com/support/>.

Energy efficiency

Efficiency performance is based on the U.S. Department of Energy Federal Energy Conservation Standards for Battery Chargers.

Energy efficiency terms - the energy efficiency values are based on the following conditions:

- **Power adapter, no-load:** Condition in which the FX3100 power adapter is connected to AC power, but not connected to device.
- **Power adapter efficiency:** Average of the FX3100 power adapter with the measured efficiency when tested at 100 percent, 75 percent, 50 percent, and 25 percent of the power adapter's rated output current.

Mode	Power consumption for FX3100	
	115V	230V
Power adapter, no load	0.03W	0.065W
Power adapter efficiency	87.03%	87.39%

Wireless communications

IMPORTANT: Due to the transmission and reception properties of wireless communications, data occasionally can be lost or delayed.

This can be due to the variation in radio signal strength that results from changes in the characteristics of the radio transmission path. Although data loss is rare, the environment where you operate the modem might adversely affect communications.

Variations in radio signal strength are referred to as fading. Fading is caused by several different factors including signal reflection, the ionosphere, and interference from other radio channels.

Inseego Corp. or its partners will not be held responsible for damages of any kind resulting from the delays or errors in data transmitted or received with the FX3100 device, or failure of the FX3100 device to transmit or receive such data.

Limited warranty and liability

THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY HAVE OTHER RIGHTS THAT VARY FROM STATE TO STATE (OR BY COUNTRY OR PROVINCE). OTHER THAN AS PERMITTED BY LAW, INSEEGO CORP DOES NOT EXCLUDE, LIMIT OR SUSPEND OTHER RIGHTS YOU MAY HAVE, INCLUDING THOSE THAT MAY ARISE FROM THE A PARTICULAR SALES CONTRACT.

INSEEGO CORP warrants for the 12-month period (or 24-month period if required by statute where you purchased the Product) immediately following your receipt of the Product that the Product will be free from defects in material and workmanship under normal use. TO THE EXTENT PERMITTED BY LAW, THESE WARRANTIES ARE EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, WITHOUT LIMITATION, ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

The exclusive remedy for a claim under this warranty shall be limited to the repair or replacement, at INSEEGO CORP'S option, of defective or non-conforming materials, parts, components, or the device. The foregoing warranties do not extend to (I) non conformities, defects or errors in the Products due to accident, abuse, misuse or negligent use of the Products or use in other than a normal and customary manner, environmental conditions not conforming to INSEEGO CORP'S specification, of failure to follow prescribed installation, operating and maintenance procedures, (II) defects, errors or nonconformities in the Product due to modifications, alterations, additions or changes not made in accordance with INSEEGO CORP'S specifications or authorized by INSEEGO CORP, (III) normal wear and tear, (IV) damage caused by force of nature or act of any third person, (V) shipping damage, (VI) service or repair of Product by the purchaser without prior written consent from INSEEGO CORP, (VII) products designated by INSEEGO CORP as beta site test samples, experimental, developmental, reproduction, sample, incomplete or out of specification Products, or (VIII) returned products if the original identification marks have been removed or altered. There is no warranty that information stored in the Product will be retained following any Product repair or replacement.

EXCEPT AS PROVIDED IN THIS WARRANTY AND TO THE MAXIMUM EXTENT PERMITTED BY LAW, INSEEGO CORP IS NOT RESPONSIBLE FOR DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR CONDITION, OR UNDER ANY OTHER LEGAL THEORY.

THE FOREGOING LIMITATION SHALL NOT APPLY TO DEATH OR PERSONAL INJURY CLAIMS, OR ANY STATUTORY LIABILITY FOR INTENTIONAL AND GROSS NEGLIGENCE ACTS AND/OR OMISSIONS. SOME STATES (COUNTRIES AND PROVINCES) DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

Safety hazards

Do not operate the FX3100 in an environment that might be susceptible to radio interference resulting in danger, specifically:

Areas where prohibited by the law

Follow any special rules and regulations and obey all signs and notices. Always turn off the host device when instructed to do so, or when you suspect that it might cause interference or danger.

Where explosive atmospheres might be present

Do not operate your device in any area where a potentially explosive atmosphere might exist. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death. Be aware and comply with all signs and instructions.

Users are advised not to operate the device while at a refueling point or service station. Users are reminded to observe restrictions on the use of radio equipment in fuel depots (fuel storage and distribution areas), chemical plants or where blasting operations are in progress.

Areas with a potentially explosive atmosphere are often but not always clearly marked. Potential locations can include gas stations, below deck on boats, chemical transfer or storage facilities, vehicles using liquefied petroleum gas (such as propane or butane), areas where the air contains chemicals or particles, such as grain, dust or metal powders, and any other area where you would normally be advised to turn off your vehicle engine.

Near medical and life support equipment

Do not operate your device in any area where medical equipment, life support equipment, or near any equipment that might be susceptible to any form of radio interference. In such areas, the host communications device must be turned off. The device can transmit signals that could interfere with this equipment.

On an aircraft, either on the ground or airborne

In addition to FAA requirements, many airline regulations state that you must suspend wireless operations before boarding an airplane. Please ensure that the modem is turned off prior to boarding aircraft in order to comply with these regulations. The modem can transmit signals that could interfere with various onboard systems and controls.

While operating a vehicle

The driver or operator of any vehicle should not operate a wireless data device while in control of a vehicle. Doing so will detract from the driver or operator's control and operation of that vehicle. In some countries, operating such communications devices while in control of a vehicle is an offense.

Electrostatic Discharge (ESD)

Electrical and electronic devices are sensitive to electrostatic discharge (ESD). Macintosh native connection software might attempt to reinitialize the device should a substantial electrostatic discharge reset the device. If the software is not operational after an ESD occurrence, then restart your computer.

6

Glossary

Glossary

- **4G LTE**—Fourth Generation Long Term Evolution. LTE is a standard for wireless data communications technology and an evolution of the GSM/UMTS standards. The goal of LTE is to increase the capacity and speed of wireless data networks using new DSP (digital signal processing) techniques and modulations that were developed around the turn of the millennium. A further goal is the redesign and simplification of the network architecture to an IP-based system with significantly reduced transfer latency compared to the 3G architecture. The LTE wireless interface is incompatible with 2G and 3G networks, so that it must be operated on a separate wireless spectrum
- **5G**—Fifth Generation. The successor to 4GLTE technology, offering greater bandwidth and higher download speeds. In addition to serving cellular networks, 5G networks can be used as internet service providers, competing with other ISPs. 5G also opens up new IoT and M2M possibilities. Wireless devices must be 5G enabled to use 5G networks.
- **802.11 (a, b, g, n, ax)**—A set of WLAN Wi-Fi communication standards in the 2.4 and 5 GHz frequency bands.
- **APN** — Access Point Name. The name of a gateway between a mobile network and another computer network, often the internet.
- **bps** — Bits per second. The rate of data flow.
- **Broadband** — High-capacity high-speed transmission channel with a wider bandwidth than conventional modem lines. Broadband channels can carry video, voice, and data simultaneously.
- **DHCP** — Dynamic Host Configuration Protocol. Software found in servers and routers that automatically assigns IP addresses and other configuration data to computers, tablets, printers, and other devices connection to the IP network.
- **DHCP Server** — A server or service with a server that assigns IP addresses.
- **DMZ** — DeMilitarized Zone. A sub-network that contains and exposes an organization's external-facing services to an untrusted network, usually a larger network such as the internet.
- **DNS** — Domain Name System. A system for converting host names and domain names into IP addresses on the internet or on local networks that use the TCP/IP protocol.
- **Firmware** — A computer program embedded in an electronic device. Firmware usually contains operating code for the device.
- **FTP** — File Transfer Protocol. A standard network protocol used to transfer computer files between a client and server.
- **GB**— Gigabyte. A multiple of the unit byte for digital information storage. Usage depends on context. When referring to disk capacities it usually means 10^9 bytes. It also applies to data transmission quantities over telecommunication circuits.

- **Gbps** — Gigabits per second. The rate of data flow.
- **HTTP**—Hypertext Transfer Protocol. An application-level protocol for accessing the World Wide web over the internet.
- **IEEE** — Institute of Electrical and Electronics Engineers. An international technical/professional society that promotes standardization in technical disciplines.
- **IMAP** — Internet Message Access Protocol. An internet standard protocol for accessing email from a remote server from email clients. IMAP allows access from multiple client devices.
- **IMEI**—International Mobile Equipment Identity. Used in LTE networks to identify the device. It is usually printed on the device and can often be retrieved using a USSD code.
- **IP** — Internet Protocol. The mechanism by which packets are routed between computers on a network.
- **IP type** — The type of service provided over a network.
- **IP address**—Internet Protocol address. The address of a device attached to an IP network (TCP/IP network).
- **ISP**—Internet Service Provider. Also referred to as the service carrier, an ISP provides internet connection service (*See Network Operator*).
- **Kbps** — Kilobits per second. The rate of data flow.
- **LAN**—Local Area Network. A type of network that lets a group of computers, all in close proximity (such as inside an office building), communicate with one another. It does not use common carrier circuits though it can have gateways or bridges to other public or private networks.
- **MAC Address**—Media Access Control. A number that uniquely identifies each network hardware device. MAC addresses are 12-digit hexadecimal numbers. This is also known as the physical or hardware address.
- **Mbps** — Megabits per second. The rate of data flow.
- **Network Operator**—The vendor that provides your wireless access. Known by different names in different regions, some examples are wireless provider, network provider, or cellular carrier.
- **Network Technology**—The technology on which a particular network provider's system is built, such as LTE or GSM.
- **NNTP** — Network News Transfer Protocol. The primary protocol used to connect to Usenet servers and transfer news articles between systems over the internet.
- **POP3** — Post Office Protocol 3. A protocol in which email is received and held for you by your internet server until you download it.
- **Port** — A virtual data connection used by programs to exchange data. It is the endpoint in a logical connection. The port is specified by the port number.

- **Port Forwarding** — A process that allows remote devices to connect to a specific computer within a private LAN.
- **Port Number** — A 16-bit number used by the TCP and UDP protocols to direct traffic on a TCP/IP host. Certain port numbers are standard for common applications.
- **Protocol** — A standard that enables connection, communication, and data transfer between computing endpoints.
- **Proxy** — A firewall mechanism that replaces the IP address of a host on the internal (protected) network with its own IP address for all traffic passing through it.
- **Router** — A device that directs traffic from one network to another.
- **RSSI** — Received Signal Strength Indicator. An estimated measure of how well a device can hear a signal from an access point or router. RSSI value is pulled from the device's Wi-Fi card (hence "received" signal strength), so it is not the same as transmit power from an access point or router.
- **SIM** — Subscriber Identification Module. Found in LTE and GSM network technology, the SIM is a card containing identification information for the subscriber and their account. The SIM card can be moved to different devices.
- **SMTP** — Simple Mail Transfer Protocol. The standard protocol for sending emails across the internet.
- **SNMP** — Simple Network Management Protocol. An internet protocol used to manage and monitor network devices and their functions.
- **SNR** — Signal to Noise Ratio. A ratio of signal power to noise power expressed in decibels. SNR is a positive value, and higher numbers are better.
- **SSID** — Service Set IDentifier. The name assigned to a Wi-Fi network.
- **TCP/IP** — Transmission Control Protocol/Internet Protocol. The set of communications protocols used for the internet and other similar networks.
- **TFTP** — Trivial File Transfer Protocol. An internet software utility for transferring files that is simpler to use than FTP but does not provide user authentication and directory visibility supported by FTP.
- **Telnet** — A user command and underlying TCP/IP protocol that allows a user on one computer to log into another computer that is part of the same network.
- **TTY** — Text Telephones (TTY), also known as Telecommunications Device for the Deaf (TDD), are used by the deaf, hard-of-hearing, and individuals with speech impairments to communicate.
- **UDP** — User Datagram Protocol (UDP) is a communications protocol that offers a limited amount of service when messages are exchanged between computers in a network that uses

the Internet Protocol (IP). UDP is an alternative to the Transmission Control Protocol (TCP) and, together with IP, is sometimes referred to as UDP/IP.

- **USSD** — Unstructured Supplementary Service Data (USSD), also known as “Quick code” or “Feature code”, is a communications protocol used to send data between a mobile device and network service provider.
- **VPN** — Virtual Private Network. A secure private network that runs over the public internet. Commonly used to connect to an office network from elsewhere.
- **Wi-Fi** — Any system that uses the 802.11 standard developed and released in 1997 by the IEEE.
- **Wi-Fi 5** — The fifth generation of Wireless Fidelity, using 802.11ac on 5 GHz. This standard was developed and released in 2013.
- **Wi-Fi 6** — The sixth generation of Wireless Fidelity, using 802.11ax on licensed exempt bands between 1 and 6 GHz. This standard was developed in 2020.
- **Wi-Fi Client** — A wireless device that connects to the internet via Wi-Fi
- **WPA/WPA2** — Wi-Fi Protected Access. A security protocol for wireless 802.11 networks from the Wi-Fi Alliance.
- **WPA3** — The next generation of Wi-Fi Protected Access. WPA3 simplifies security, provides more robust authentication, increased cryptographic strength, and offers additional capabilities for personal and enterprise networks. WPA3 retains interoperability with WPA2 devices.